

Fig. 1

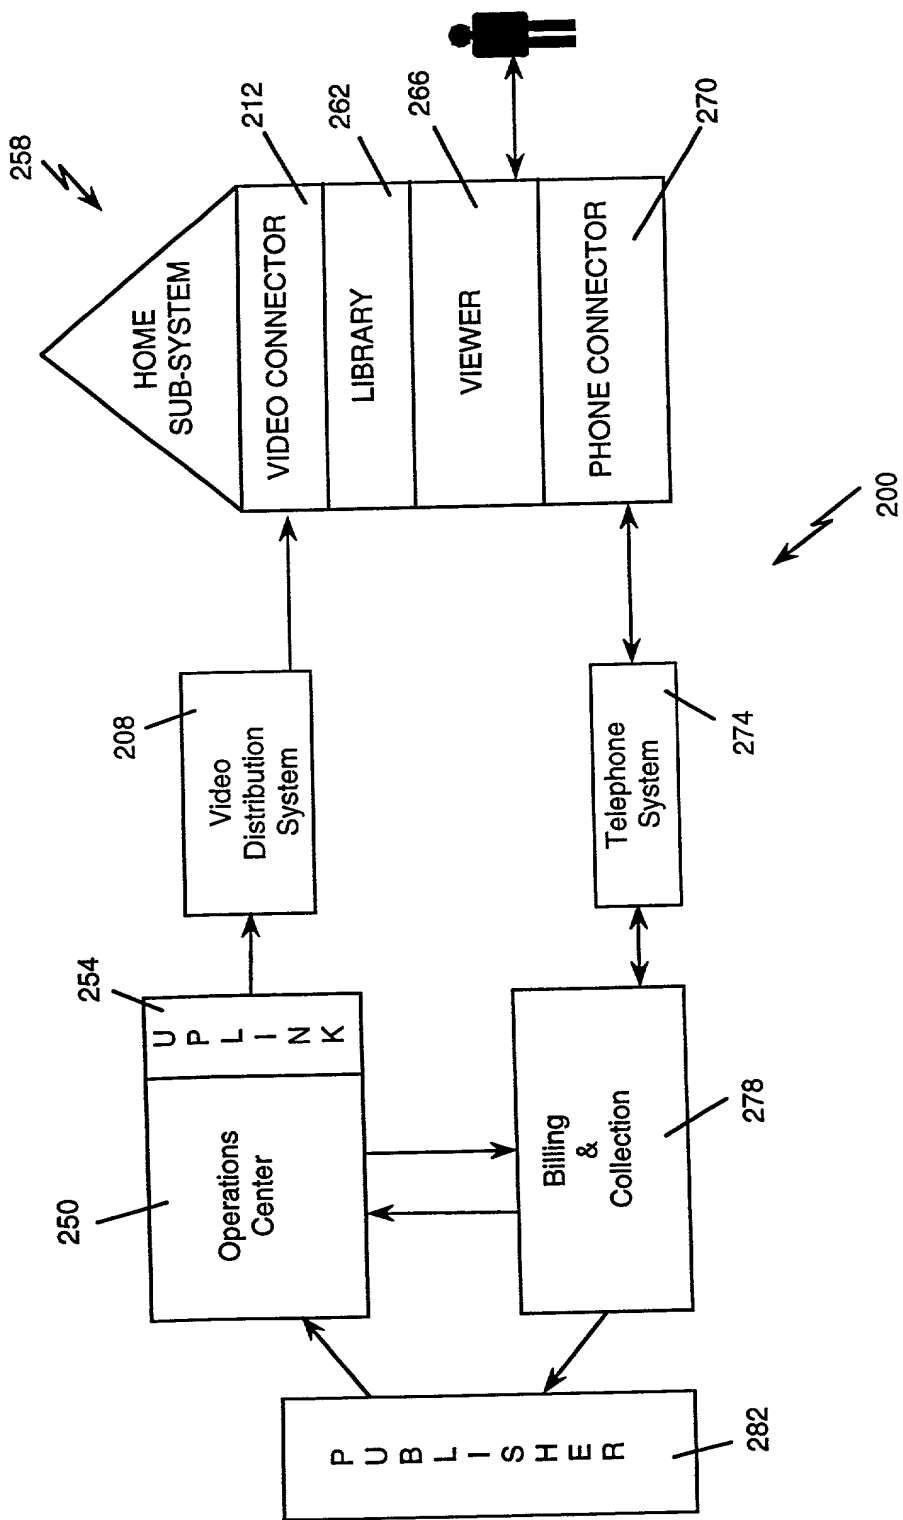 


Fig. 2

Fig. 3

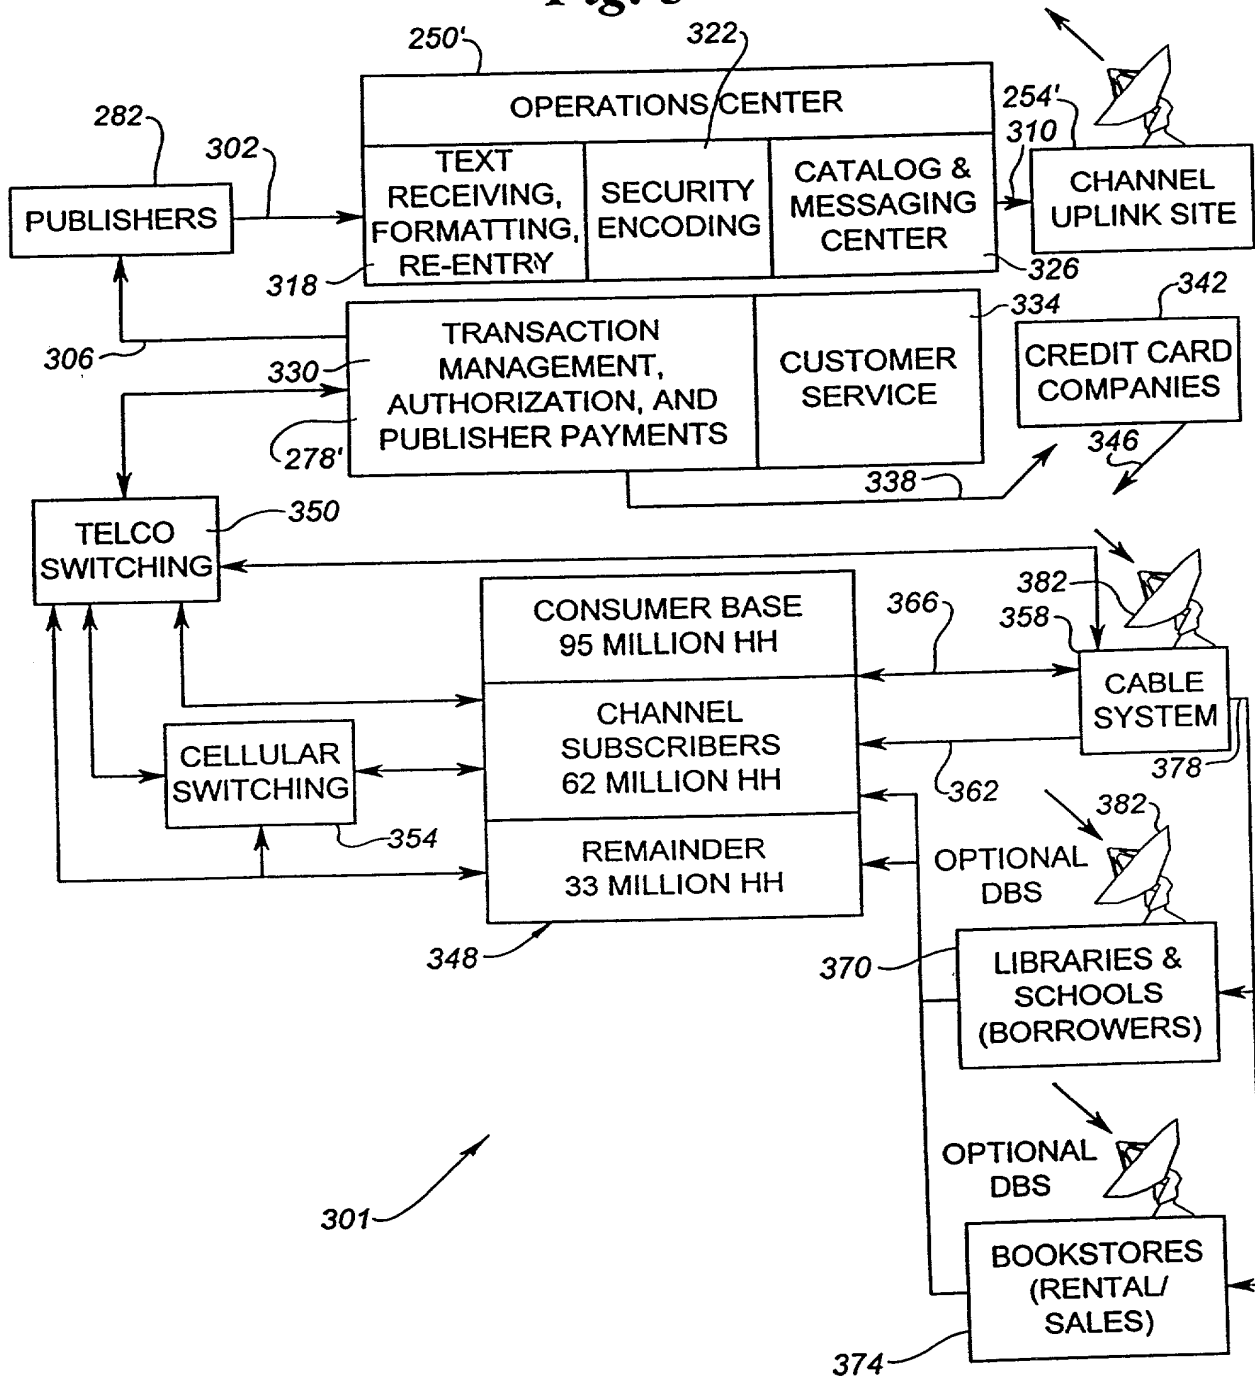 


FIG. 3

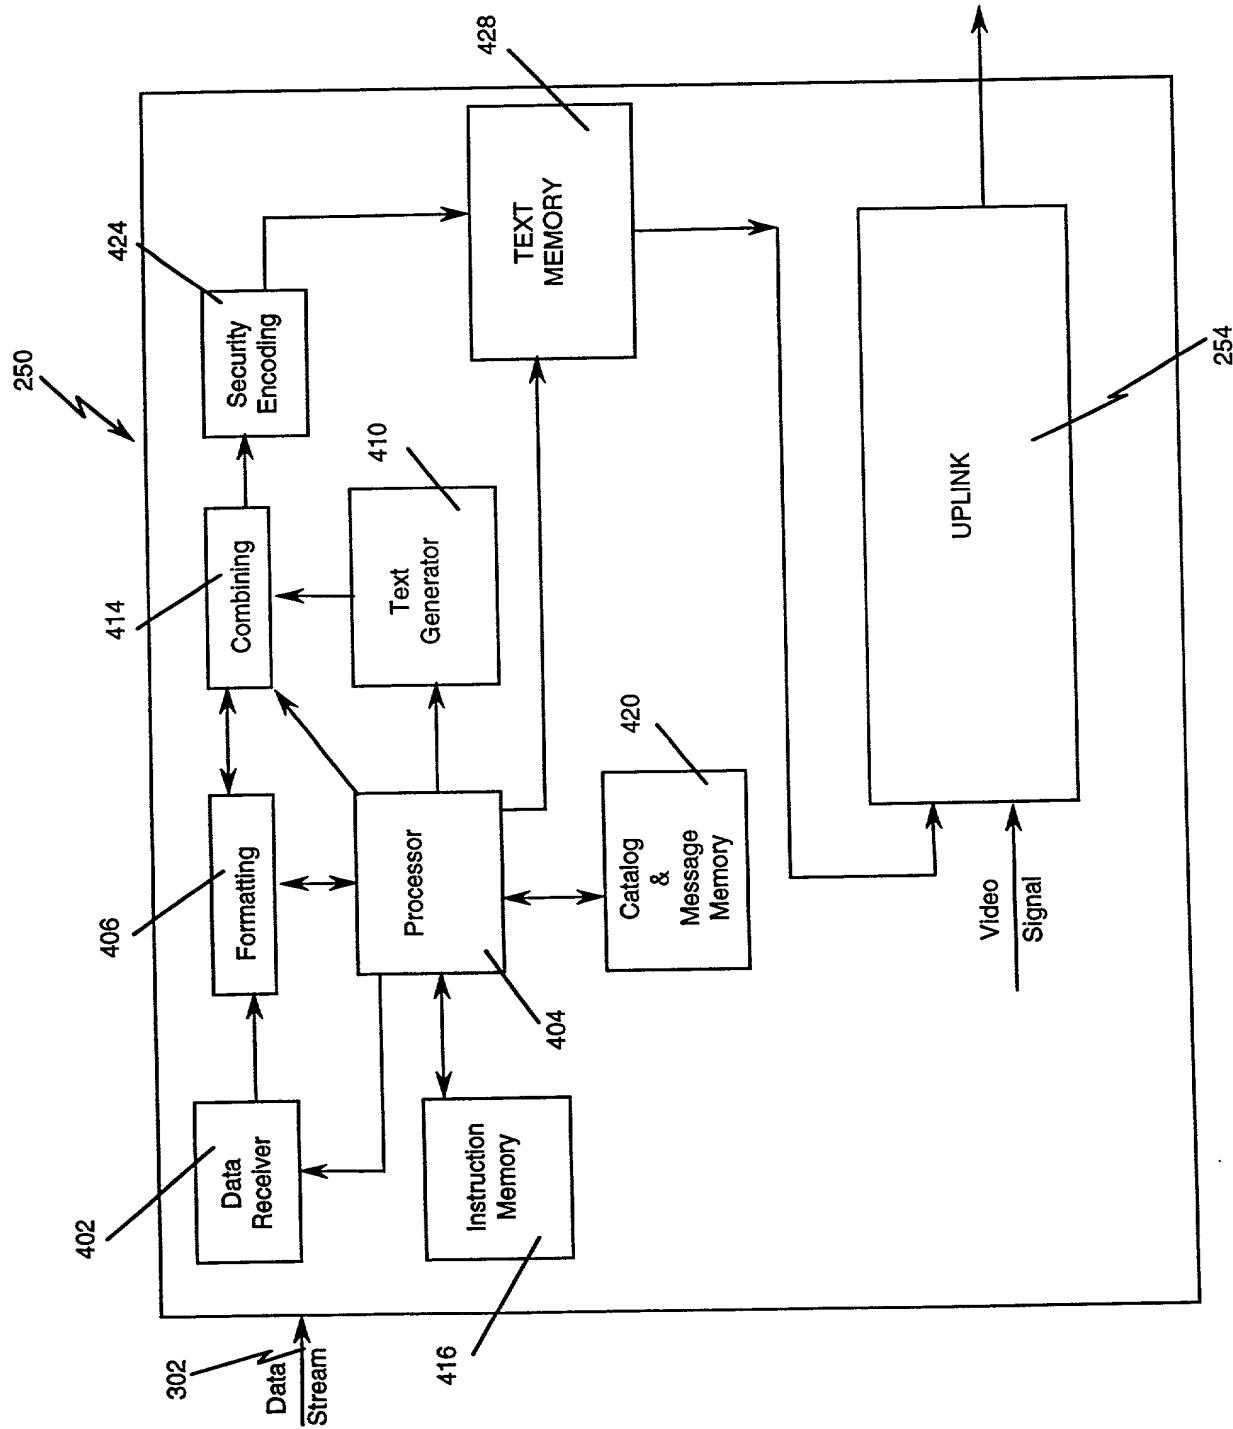 


Fig. 4

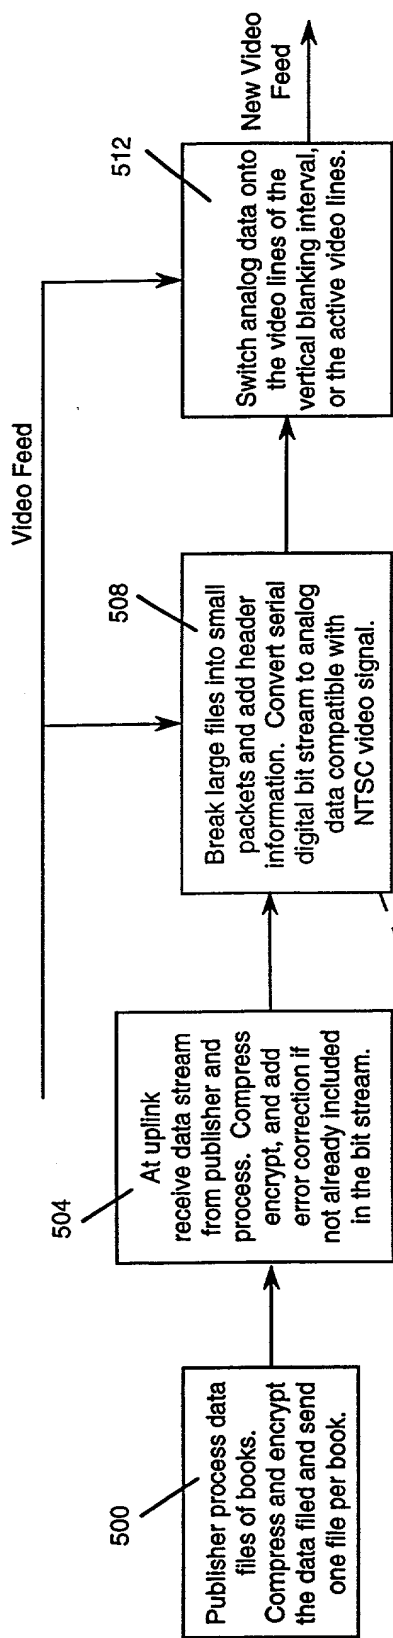 


Fig. 5a

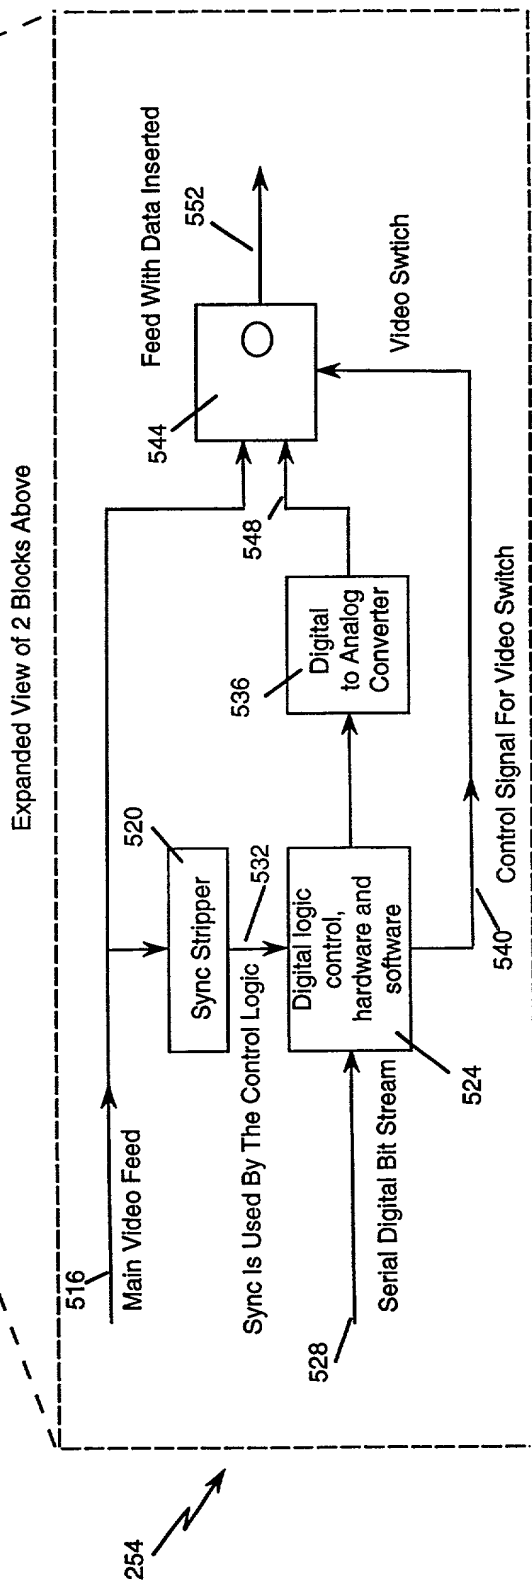 


Fig. 5b

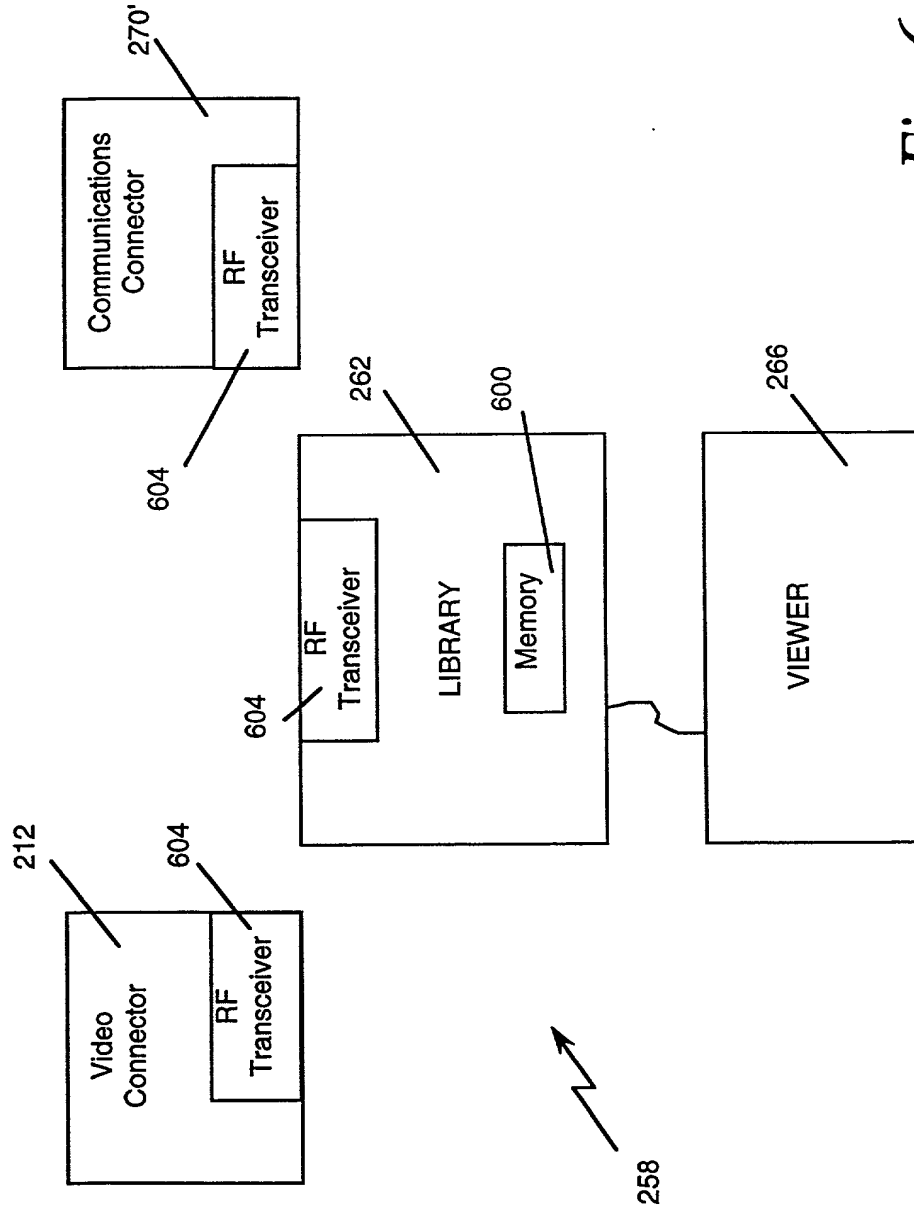 


Fig. 6a

The diagram illustrates a system architecture with the following components and connections:

- VIEWER (607):** Contains an LCD (602), a Key (605), Security (606), and a Microprocessor (606). It is connected to an RF Transceiver (604) and a BATTERY (603).
- CD ROM PLAYER:** Connected to the VIEWER via a Data line.
- Hard Disk With Key (600):** Connected to the VIEWER via a Secure Data line (615) and a Key line (621).
- LIBRARY:** Contains a Tuner (613), Data Stripper (617), Digital Logic (609), Removal Disk (600), Cellular Phone or PCN Phone (611'), and POWER (610). It is connected to an RF Transceiver (604') and a Modem (611).
- SET TOP:** Connected to the LIBRARY via a CATV line (212') and a Video line (212). It is also connected to a Phone (270) and a Digital Data line (619).
- AC Power:** Connected to the RF Transceiver (604), the LIBRARY (262), and the POWER (610) component.
- Other Connections:**
 - RF Transceiver (604) is connected to an antenna (266).
 - RF Transceiver (604') is connected to an antenna (262).
 - Modem (611) is connected to a Phone (270).
 - Digital Logic (609) is connected to the Removal Disk (600) and the Cellular Phone or PCN Phone (611').
 - Data Stripper (617) is connected to the Digital Logic (609).
 - Tuner (613) is connected to the Data Stripper (617).

Fig. 6b

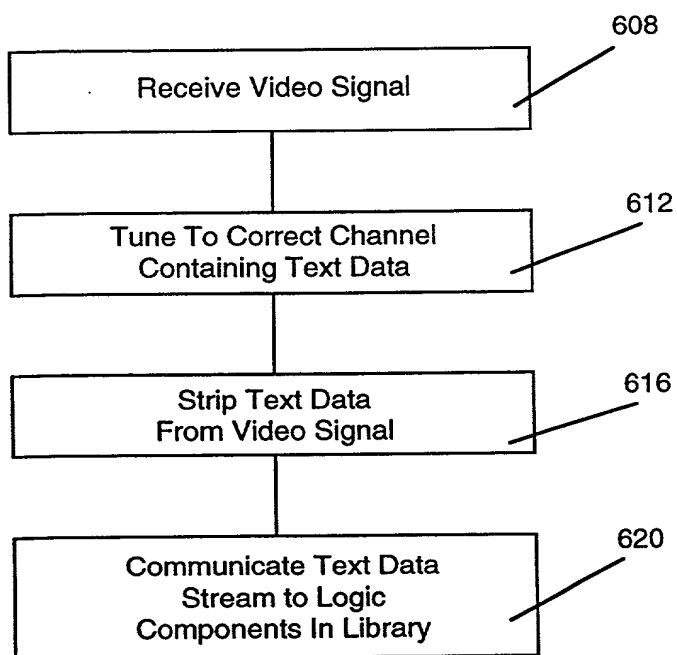 


Fig. 7

09964837 092804
T00260-08949660

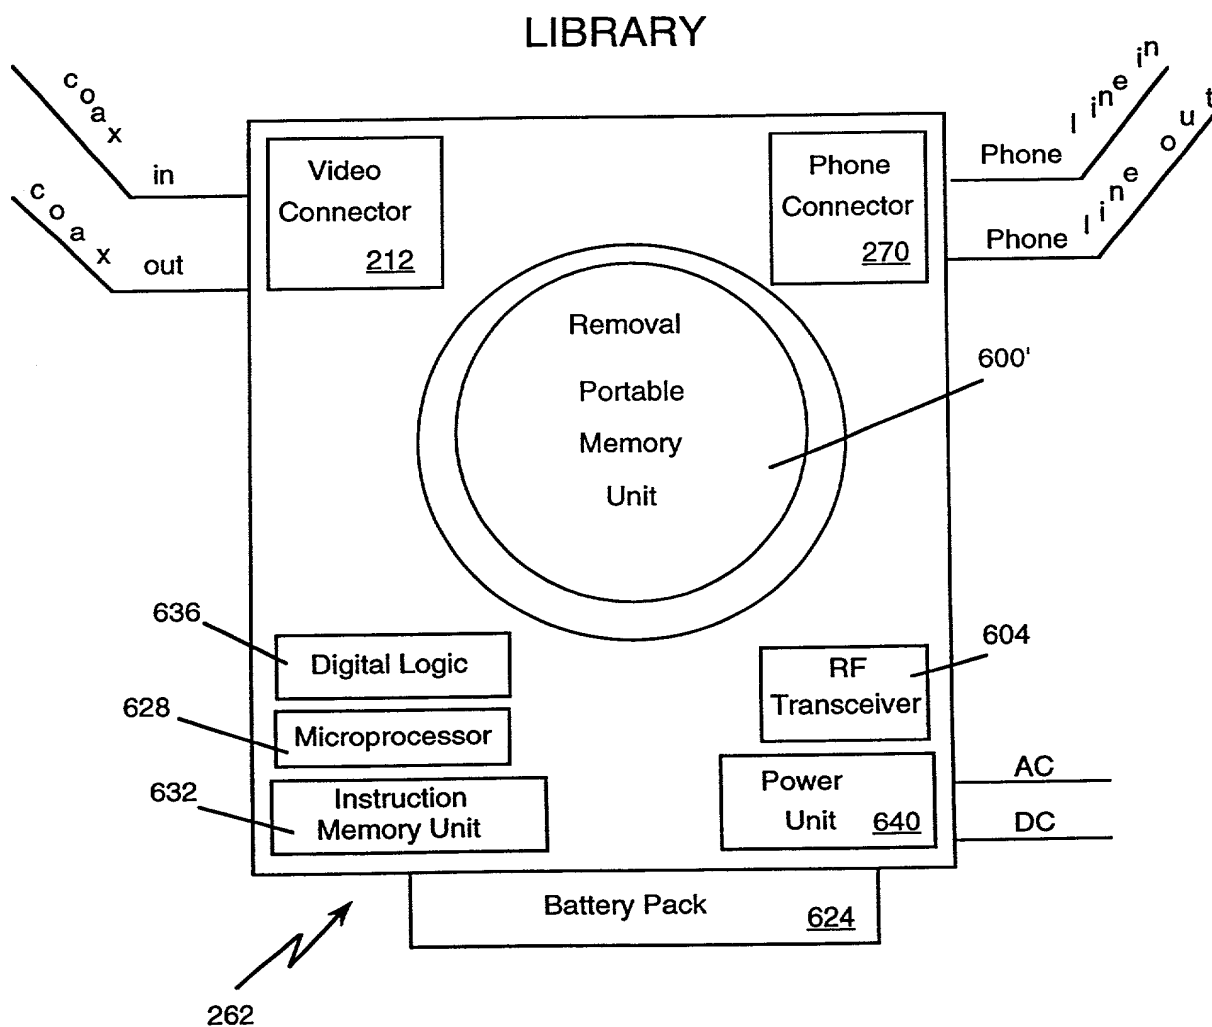 


Fig. 8

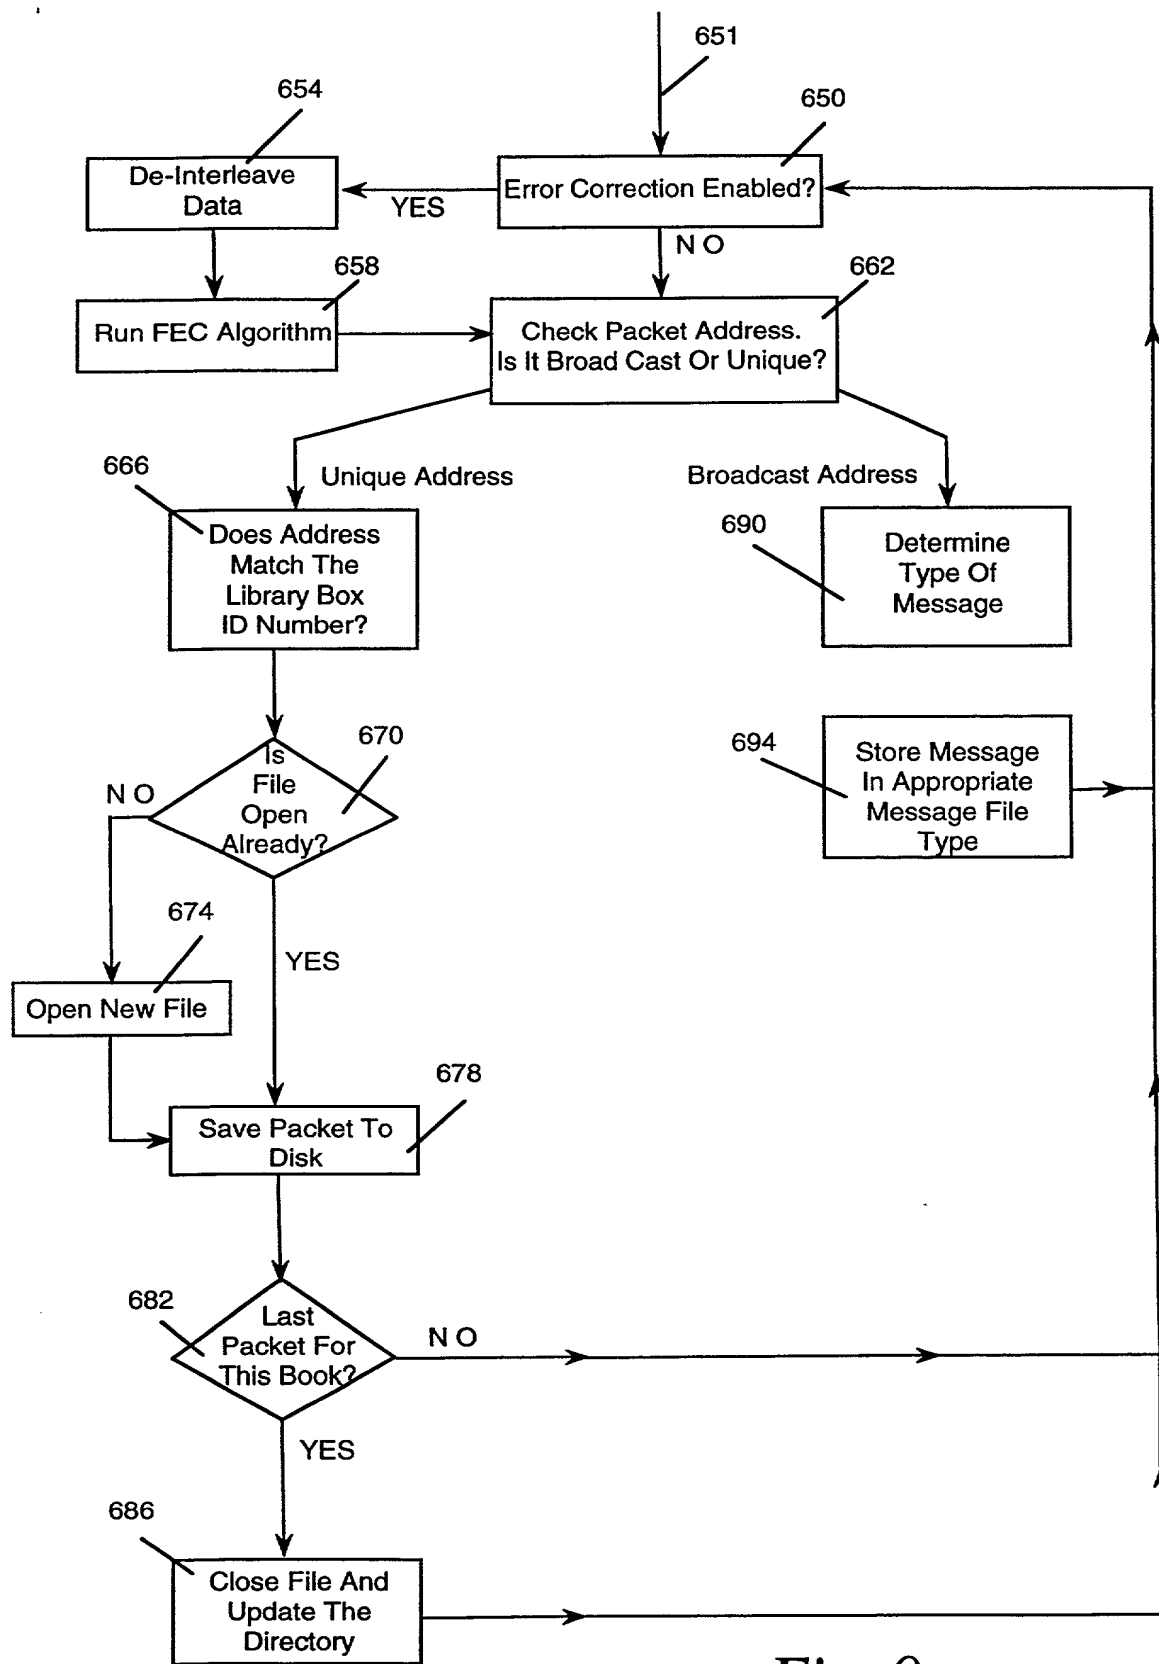 


Fig. 9

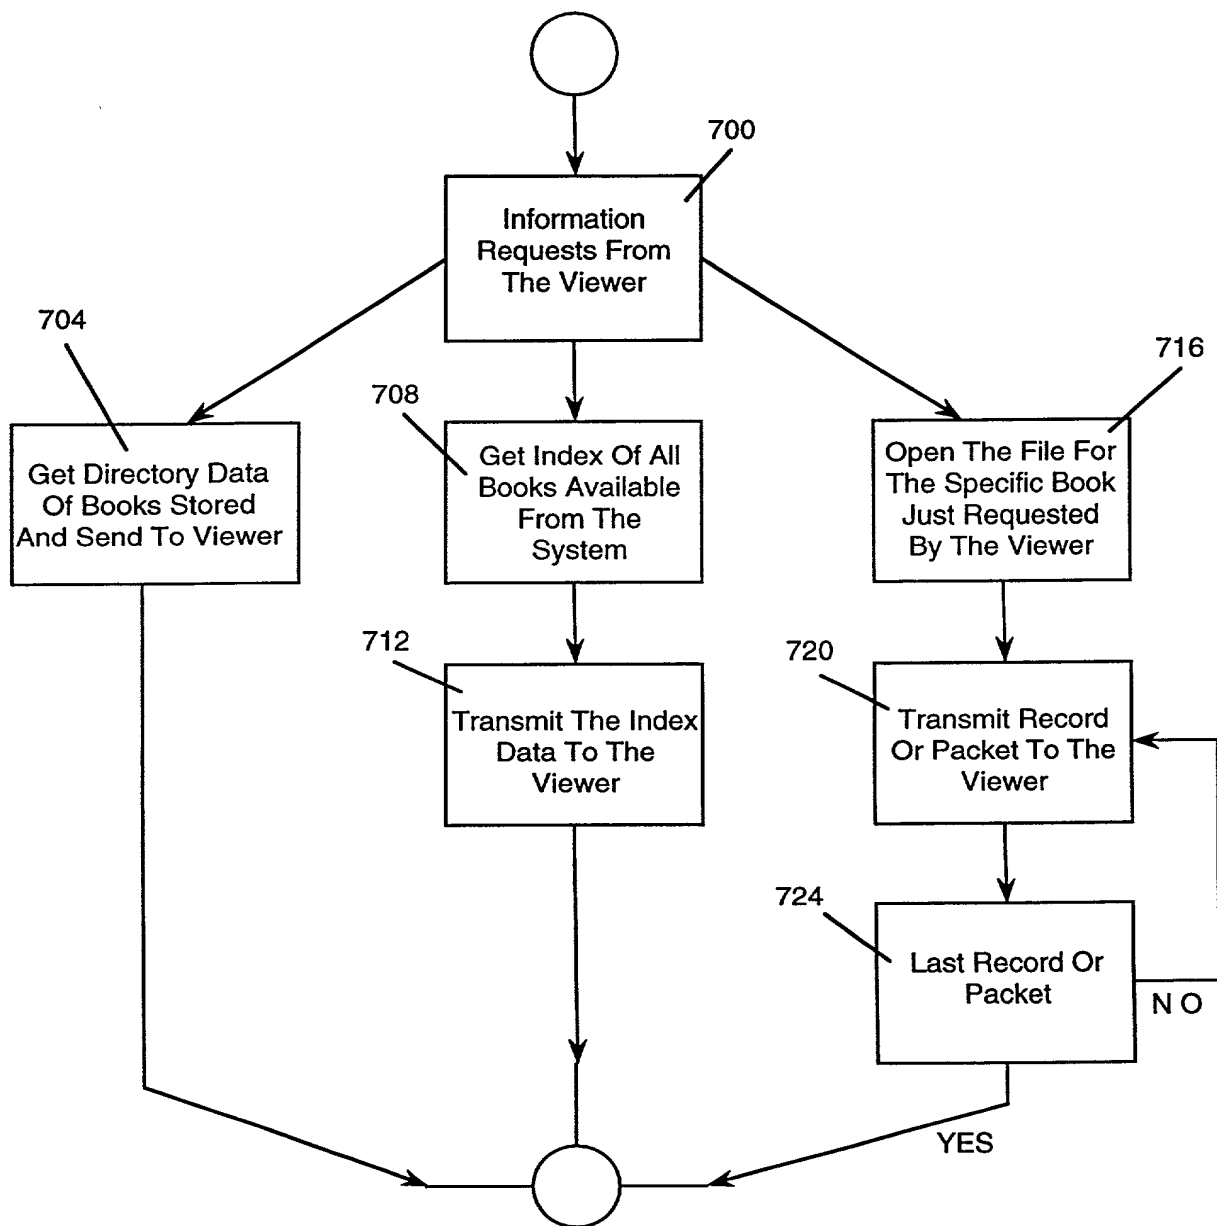 


Fig. 10

1002260" E8879550

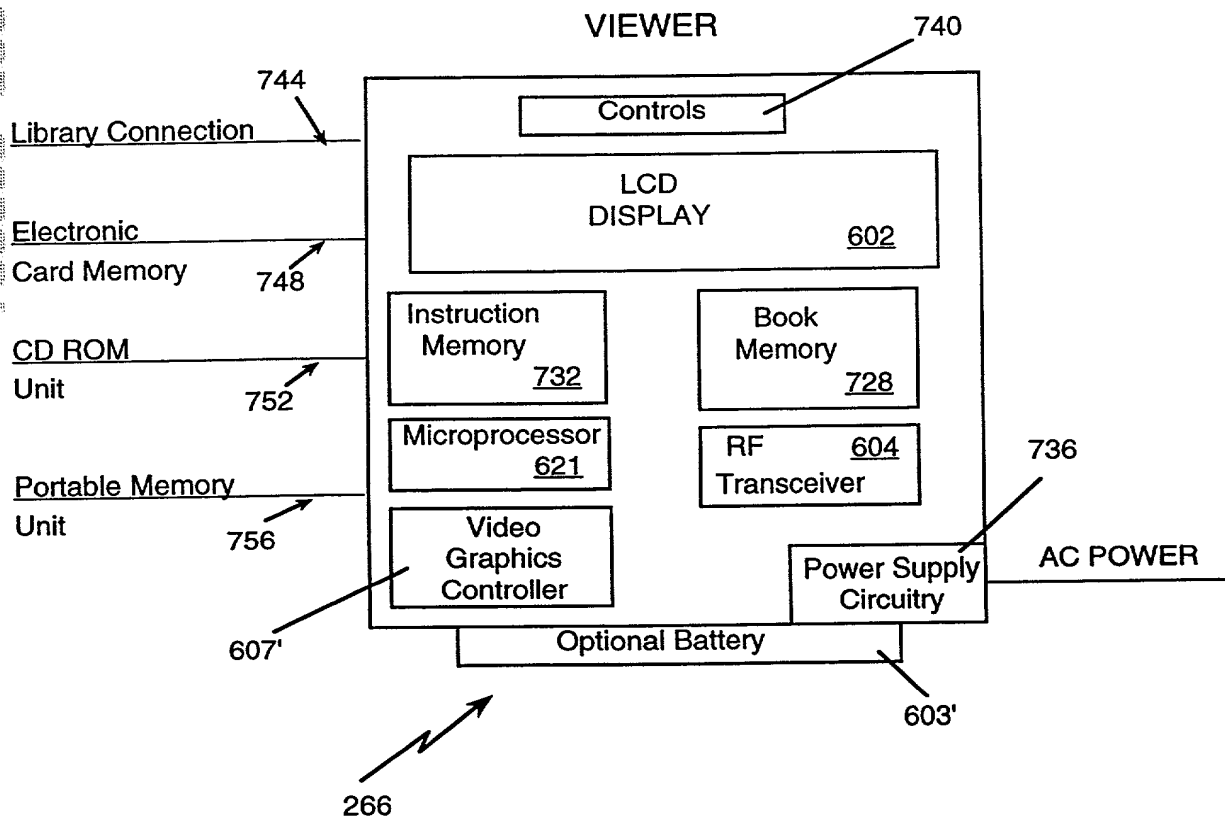 


Fig. 11

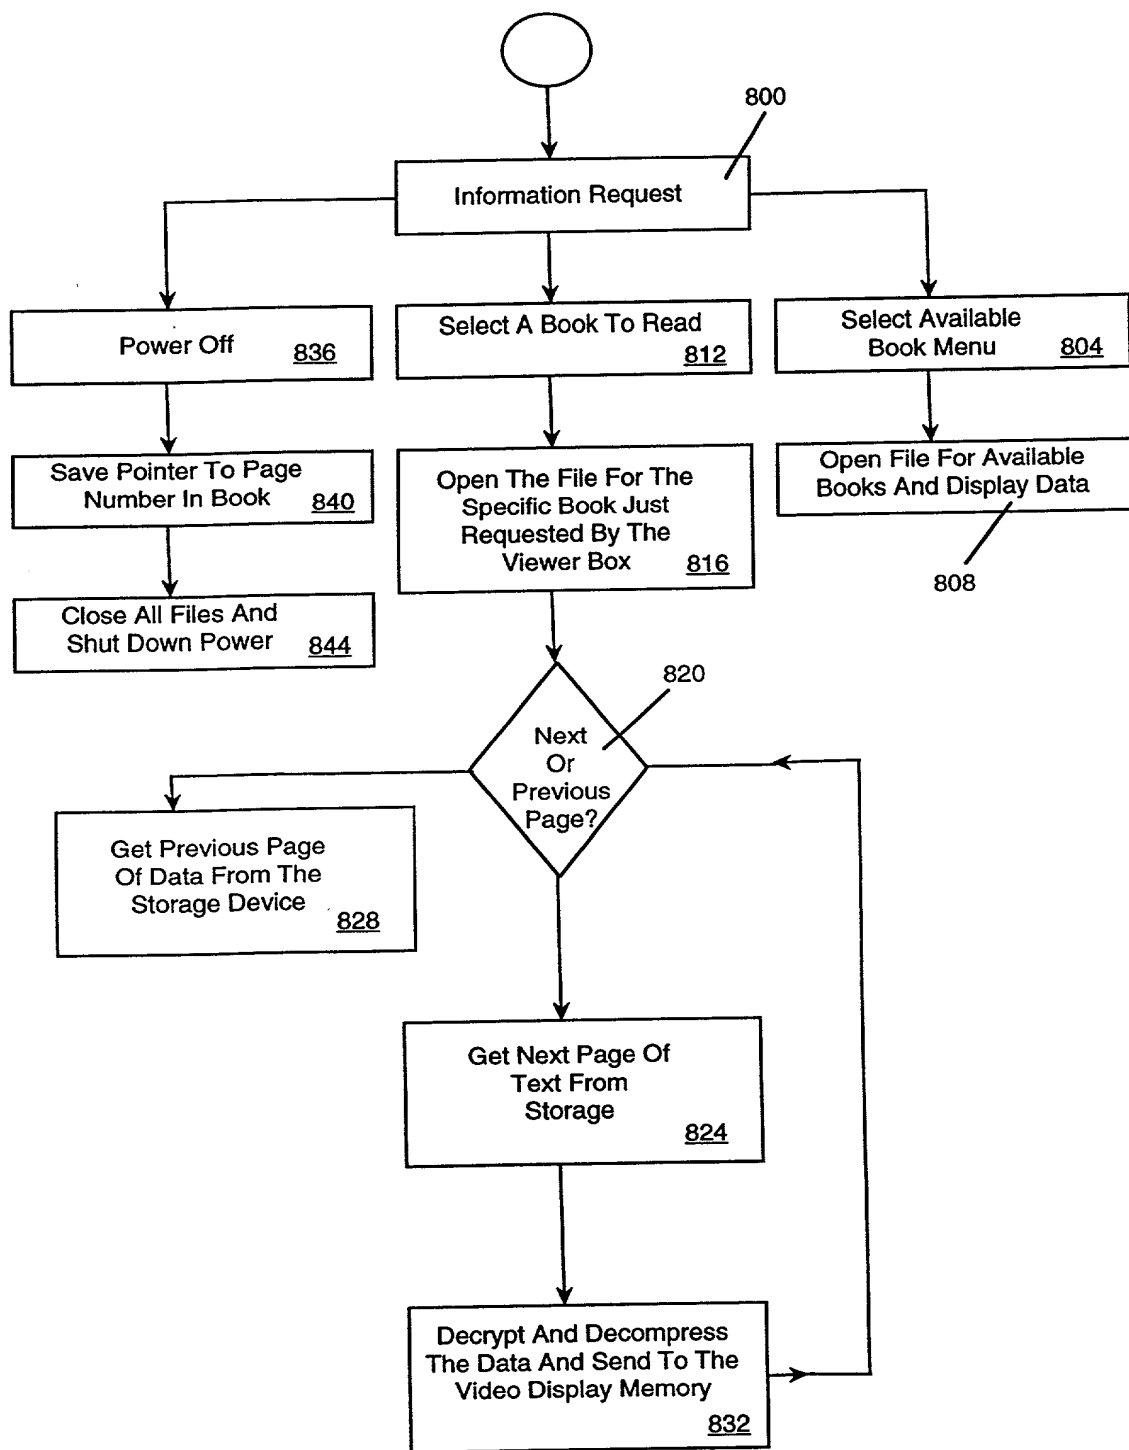 
[illegible]

Fig. 12

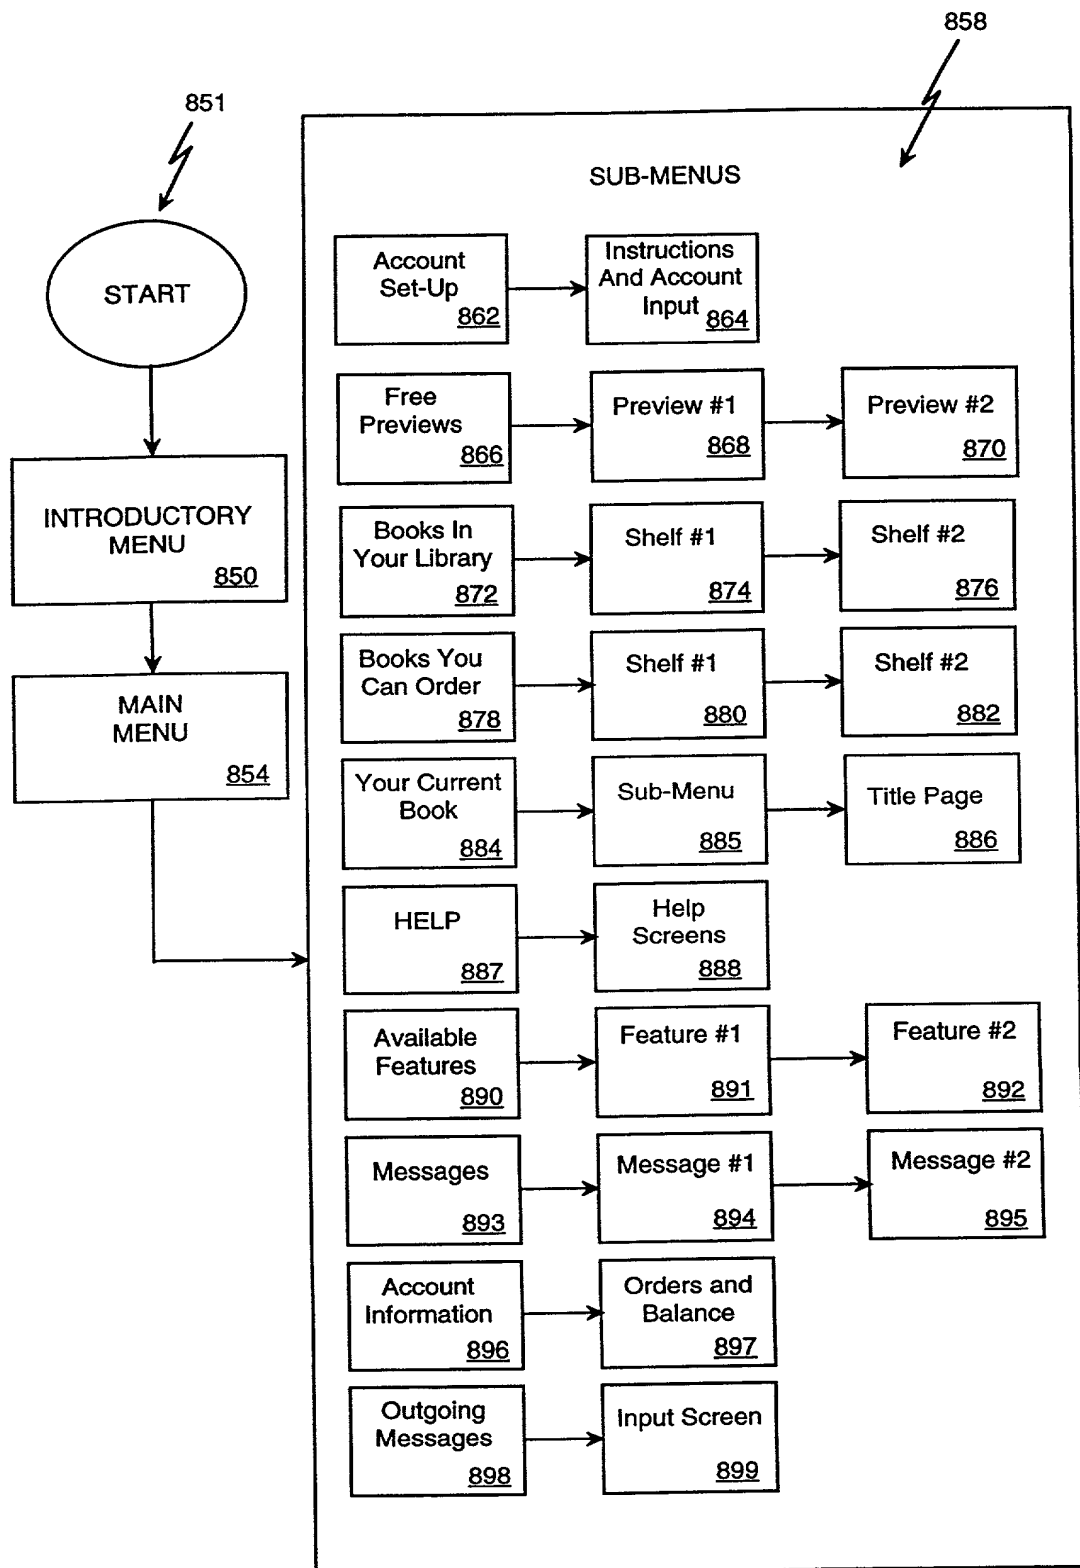 


Fig. 13

Fig. 14a

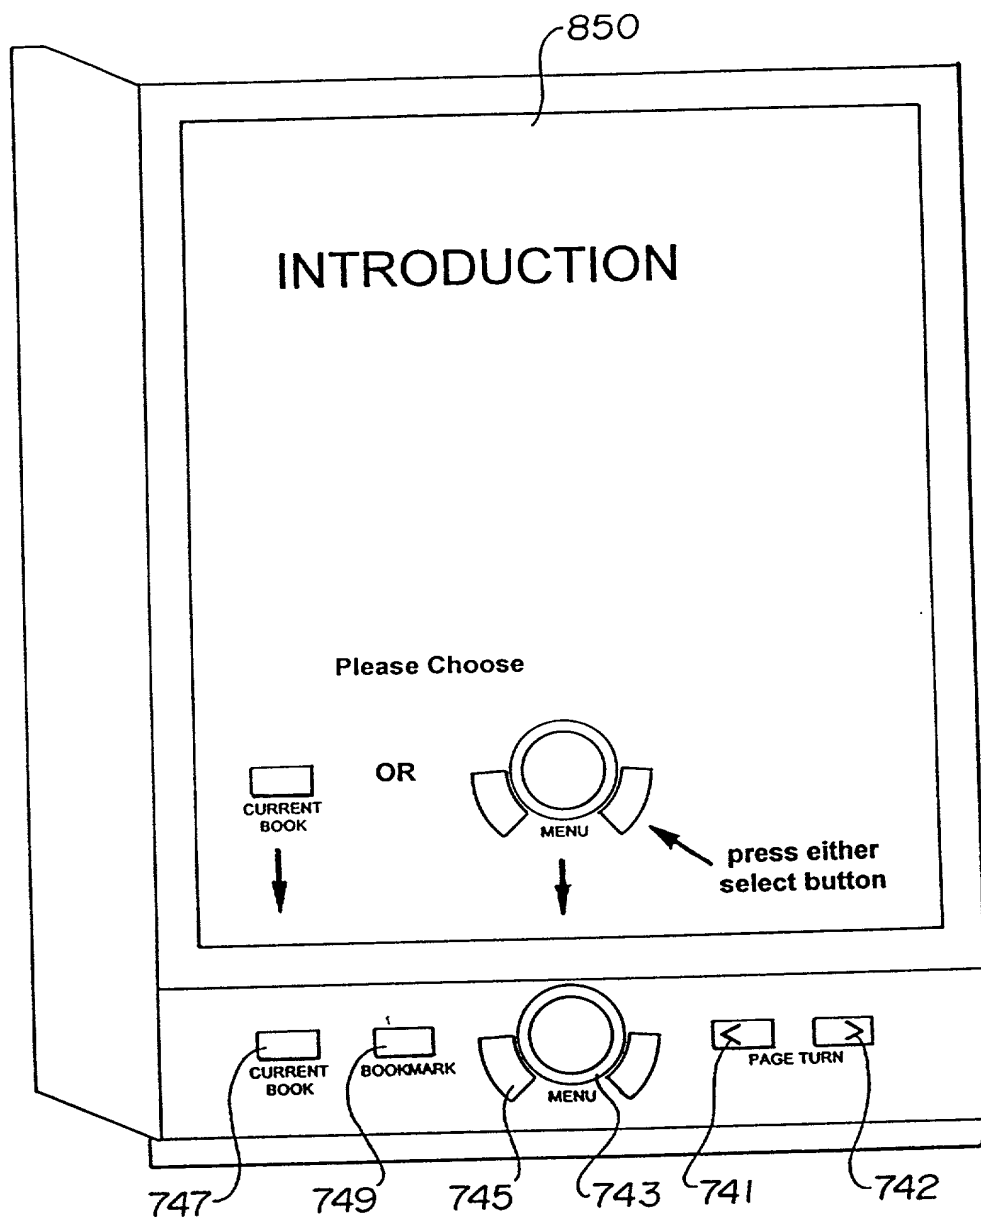 


Fig. 14b

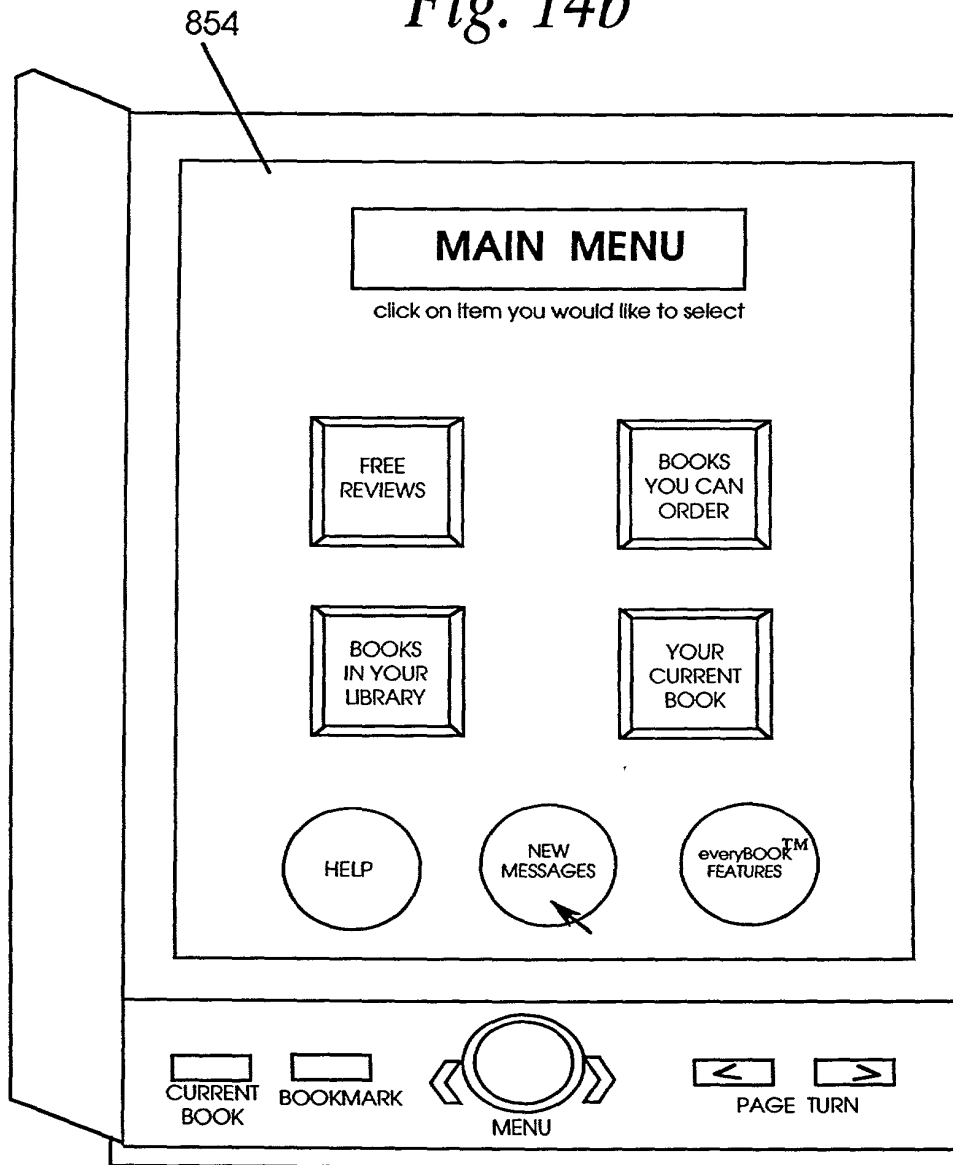 
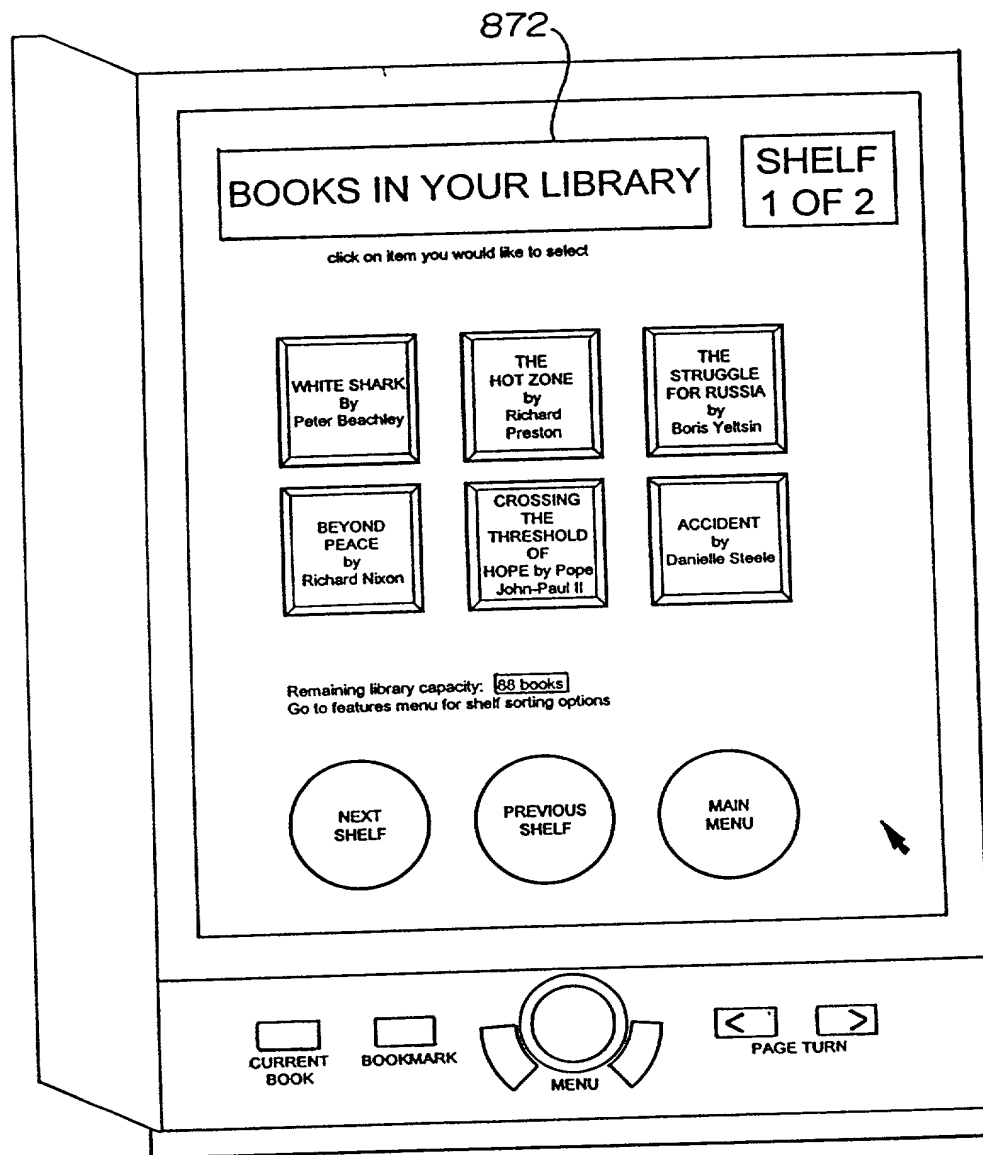 


Fig. 14c



108260-00049660

Fig. 14d

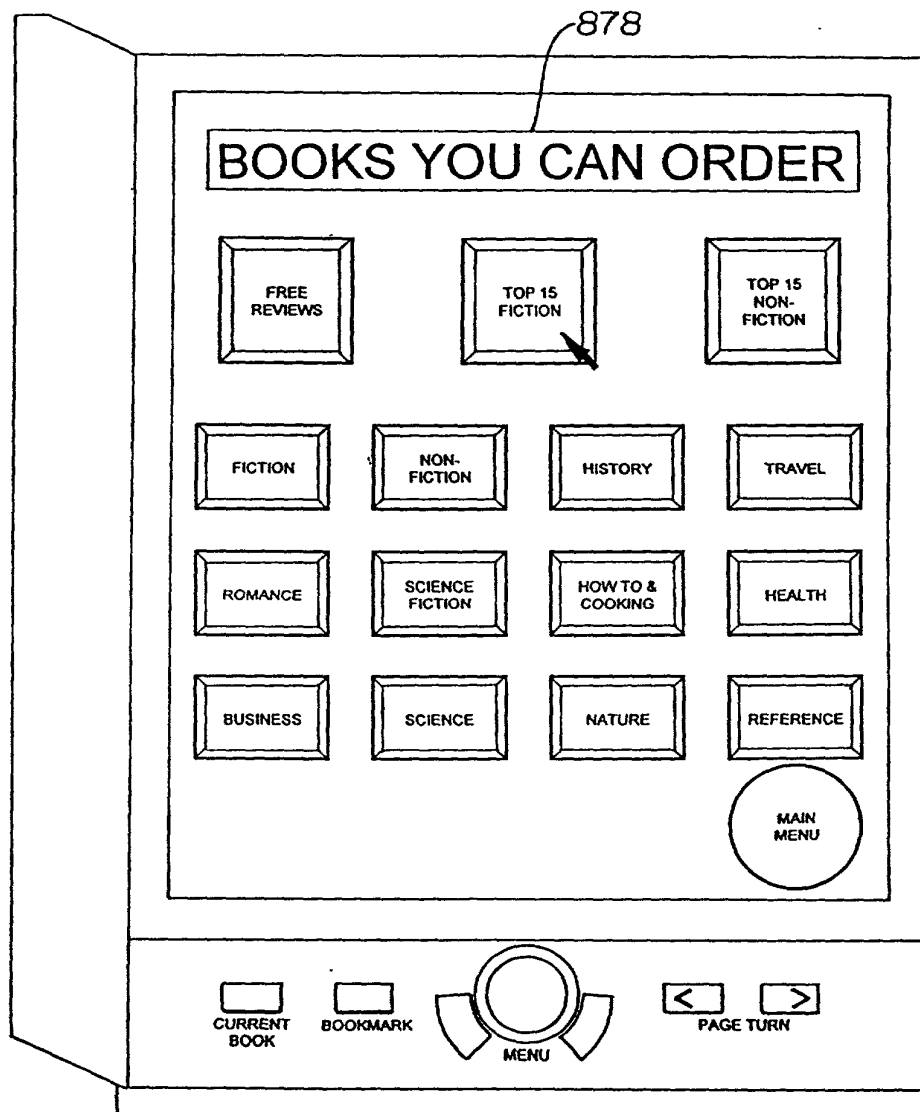 


FIG. 14d

Fig. 14e

880

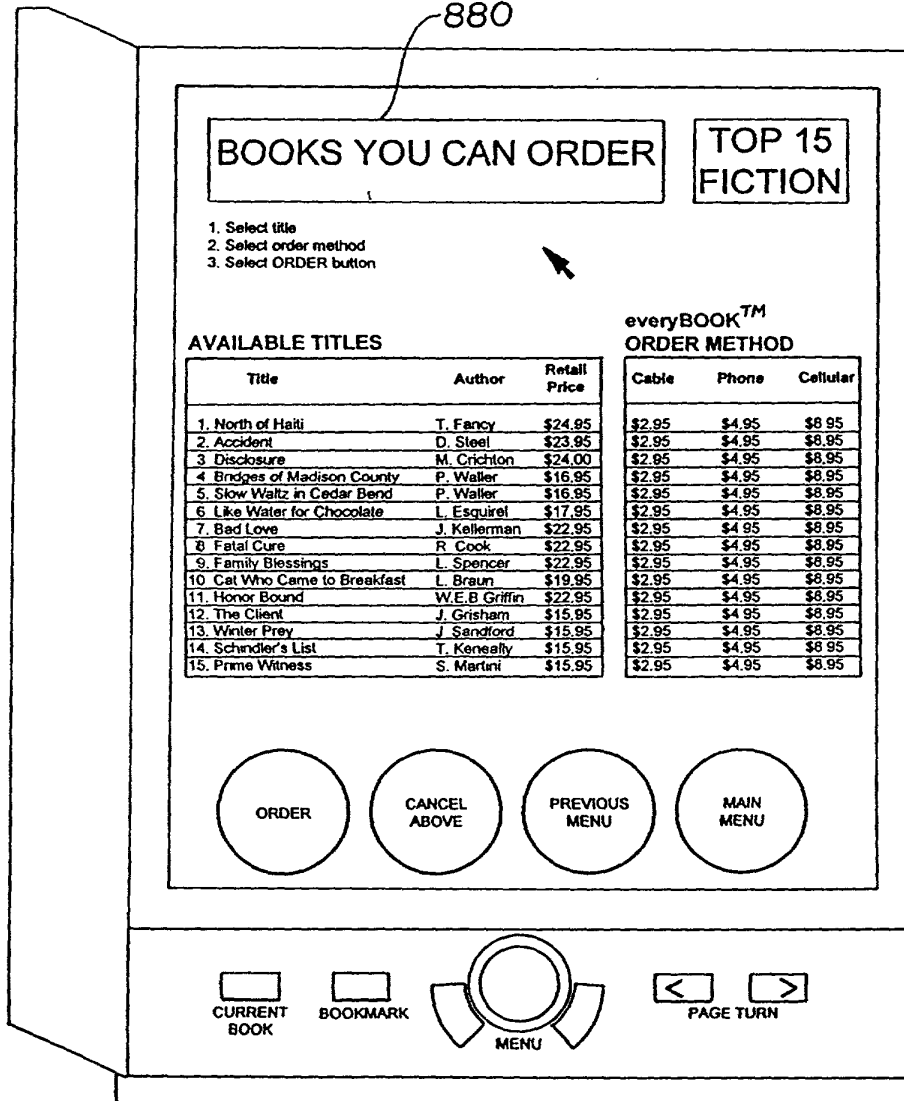 
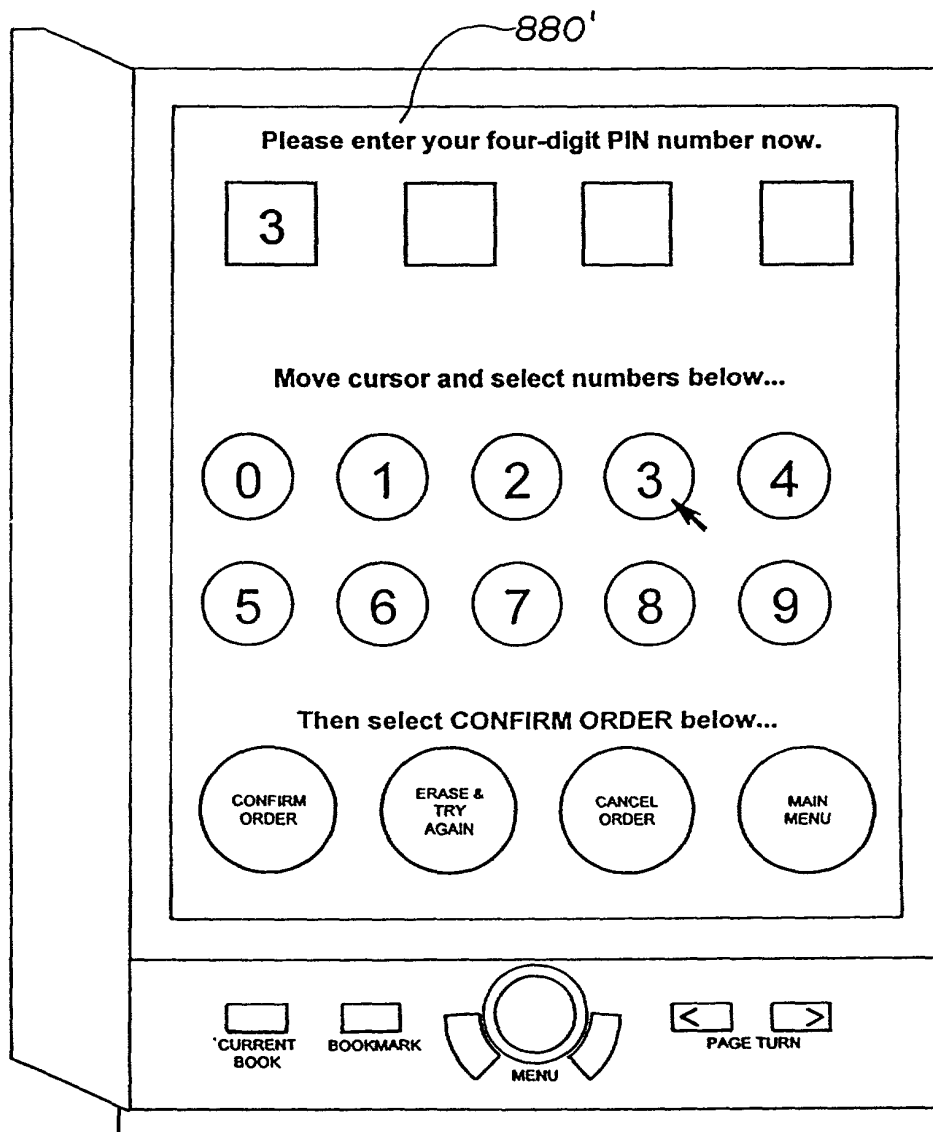 


FIG. 14e

Fig. 14f



FOR 260-88849660

Fig. 14g

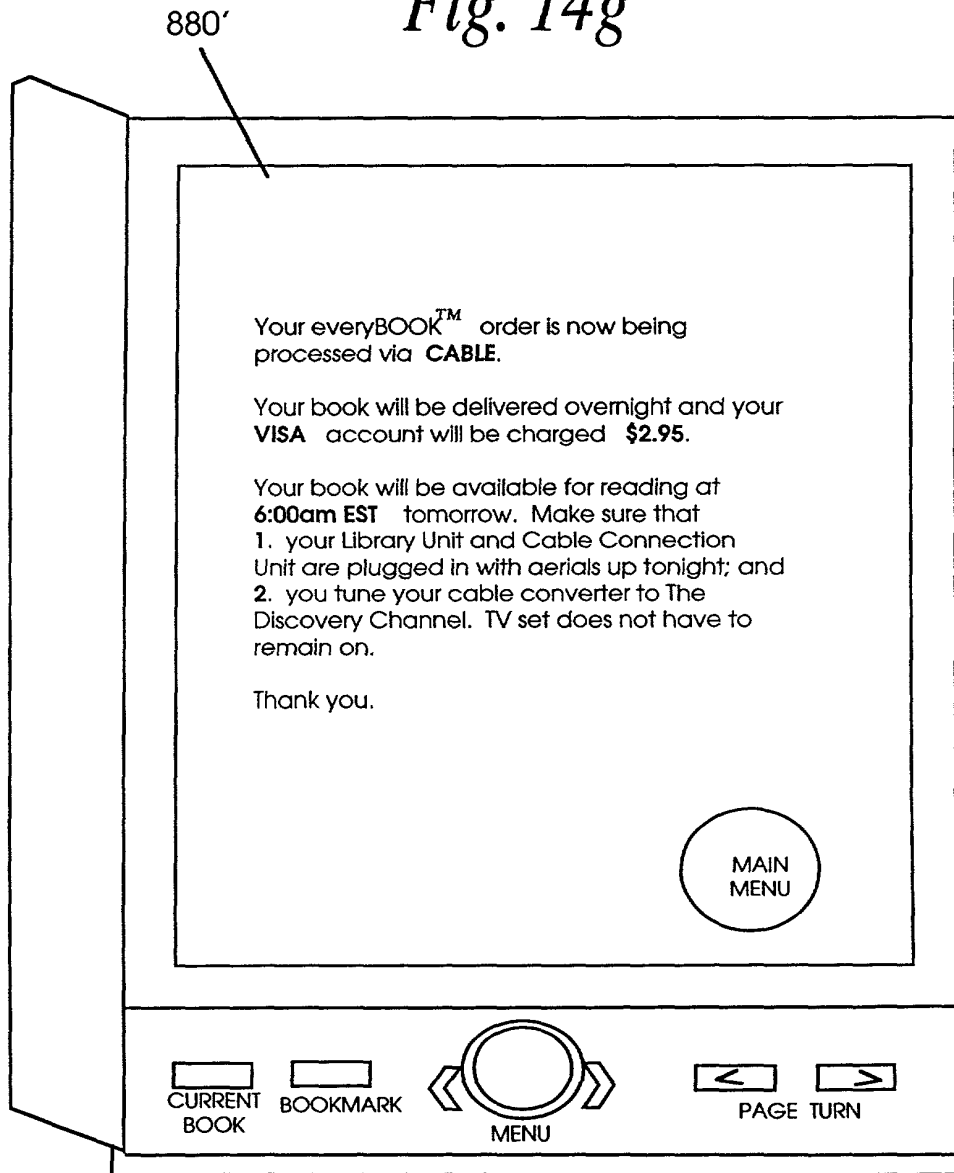


Fig. 14h

862

SET UP ACCOUNT

SCREEN
1 OF 6

Step 1

Enter a four-digit PIN number to protect
your credit card information.

3

Move cursor and select numbers below...

0

1

2

3

4

5

6

7

8

9

Write down your
PIN code and keep
it in a secure place.

CANCEL
ORDER

MAIN
MENU

CURRENT
BOOK

BOOKMARK

MENU

PAGE TURN

Fig. 14j

864'

SET UP ACCOUNT

SCREEN
3 OF 6

Aren't you glad you only have to do this once?

STEP 5

Enter your name as it appears on your credit card

A	B	C	D	E	F
G	H	I	J	K	L
M	N	O	P	Q	R
S	T	U	V	W	X
Y	Z	.	-	space	

ERASE
& TRY
AGAIN

CONFIRM
&
CONTINUE

CURRENT
BOOK

BOOKMARK

◀

▶

MENU

◀

▶

PAGE TURN

Fig. 14k

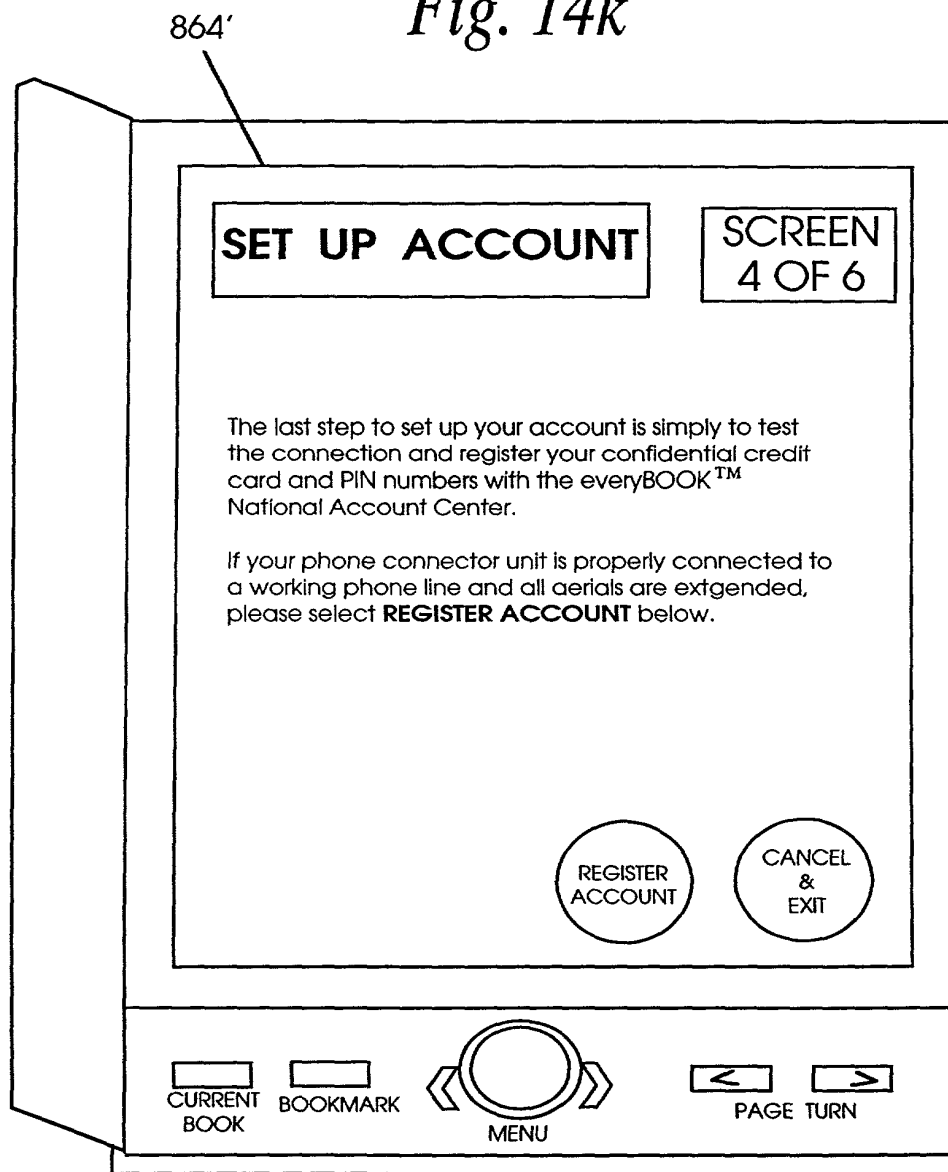 


Fig. 14l

864'

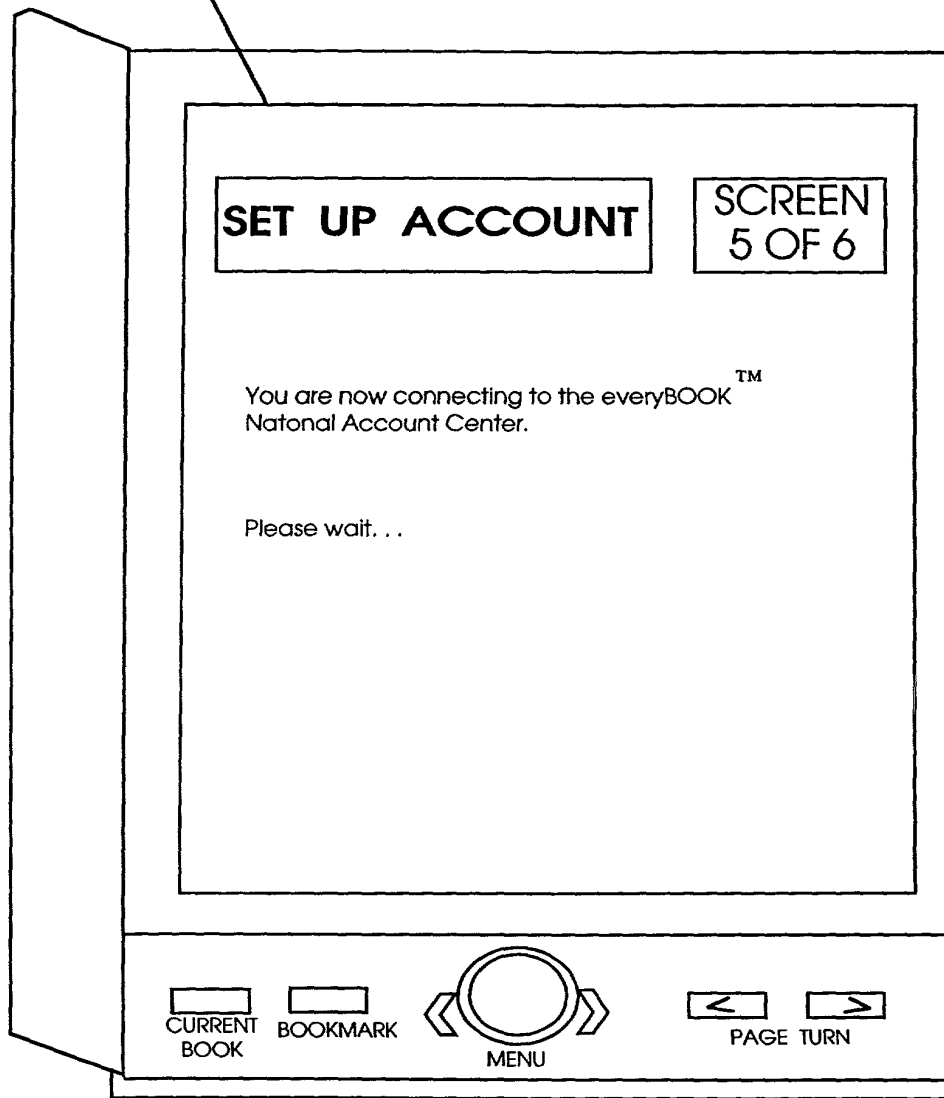 


FIG. 14L

Fig. 14m

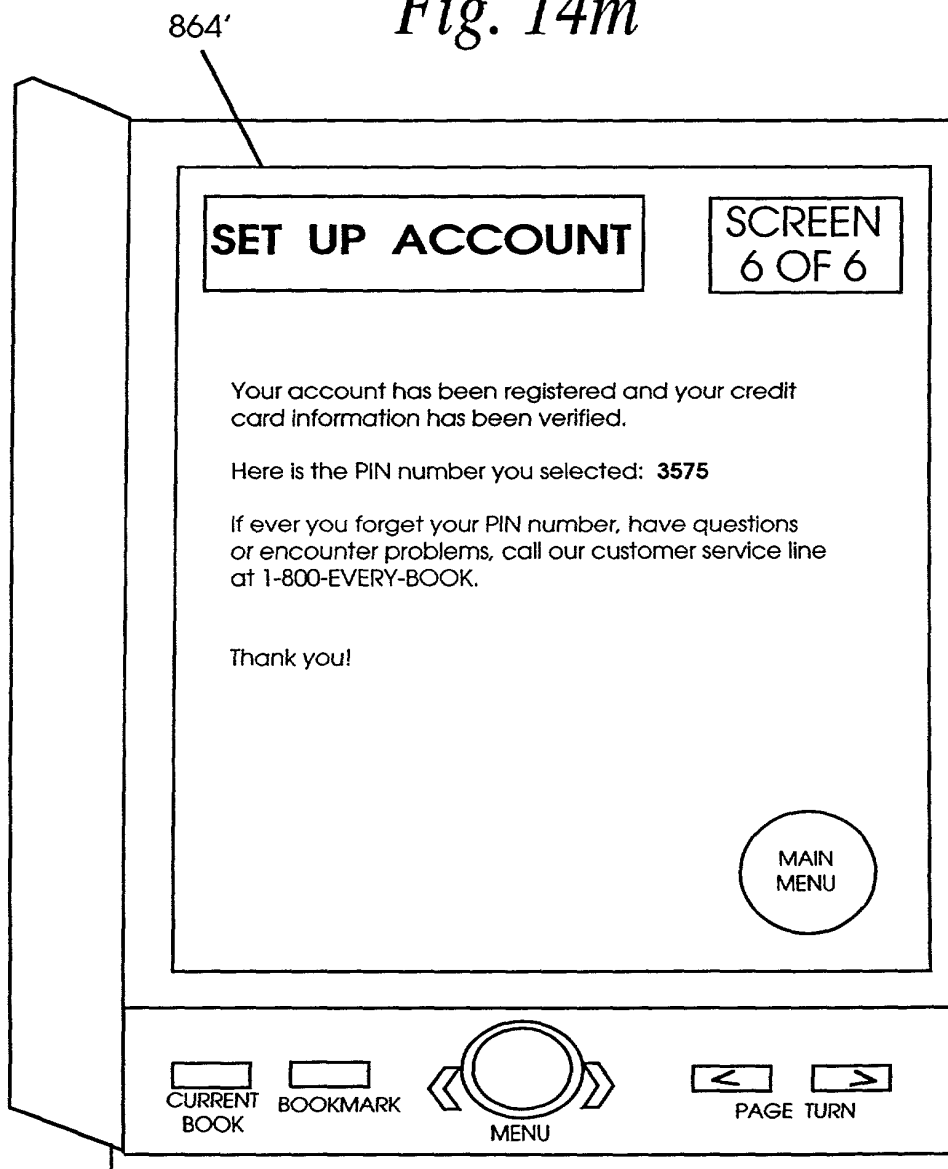 


Fig. 14n

866

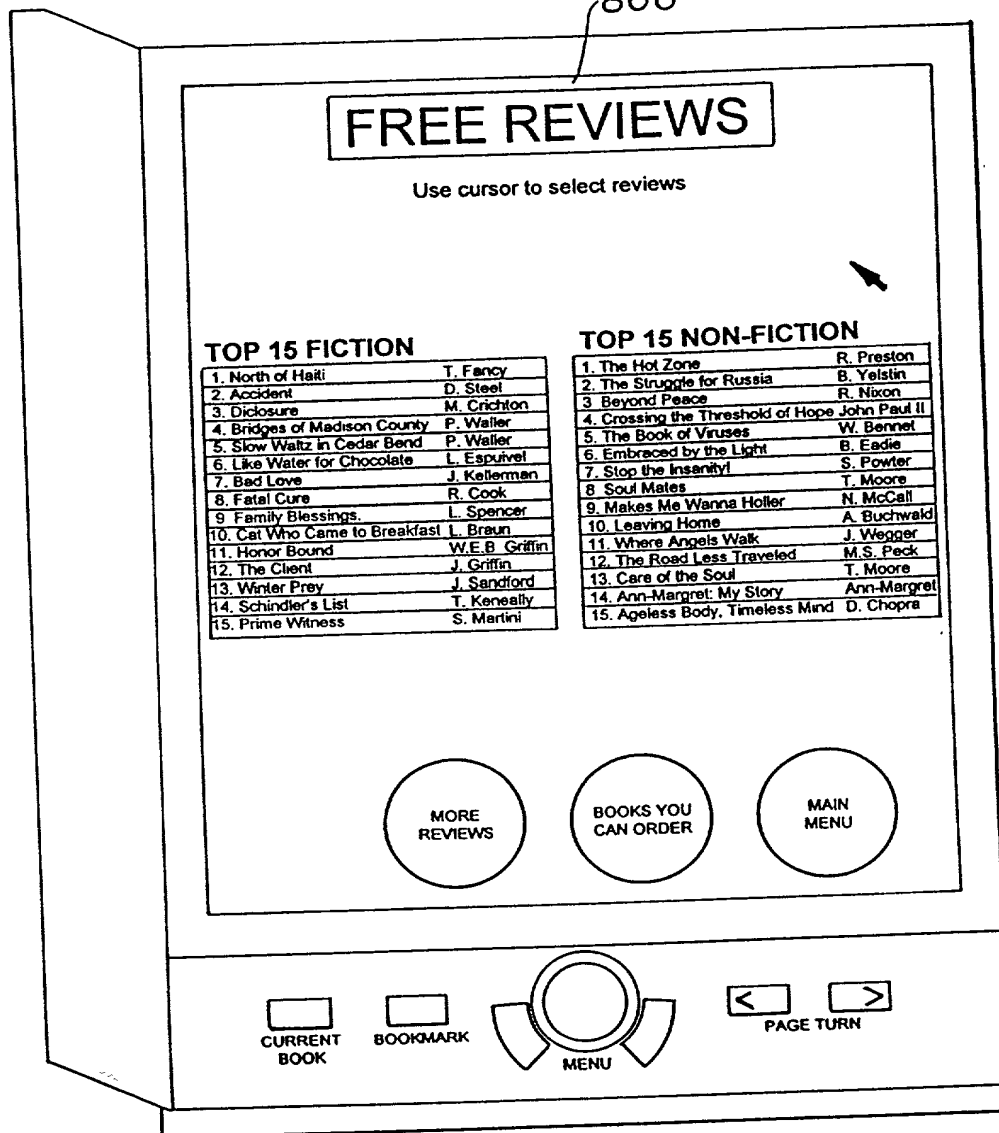 
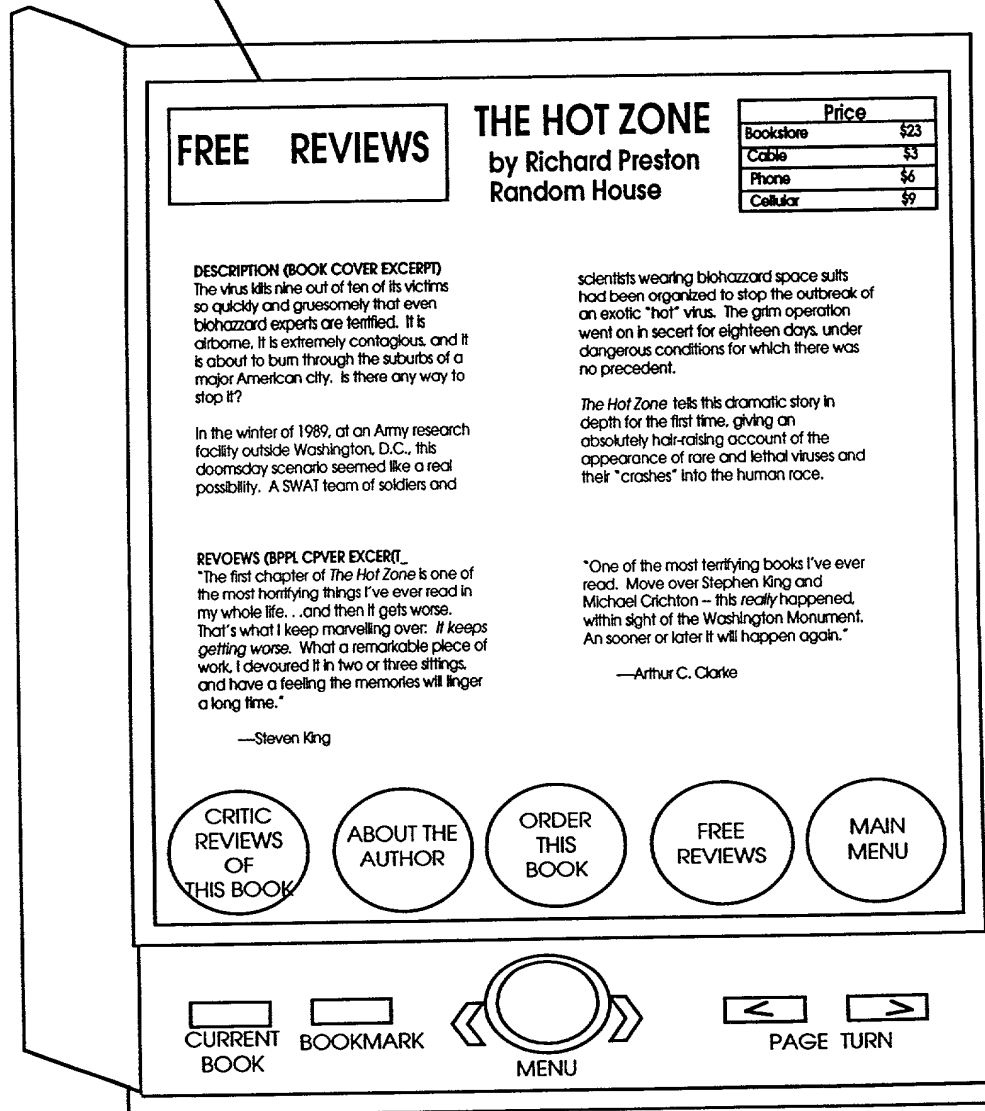 


Fig. 140

868



09964883 092804

Fig. 14p

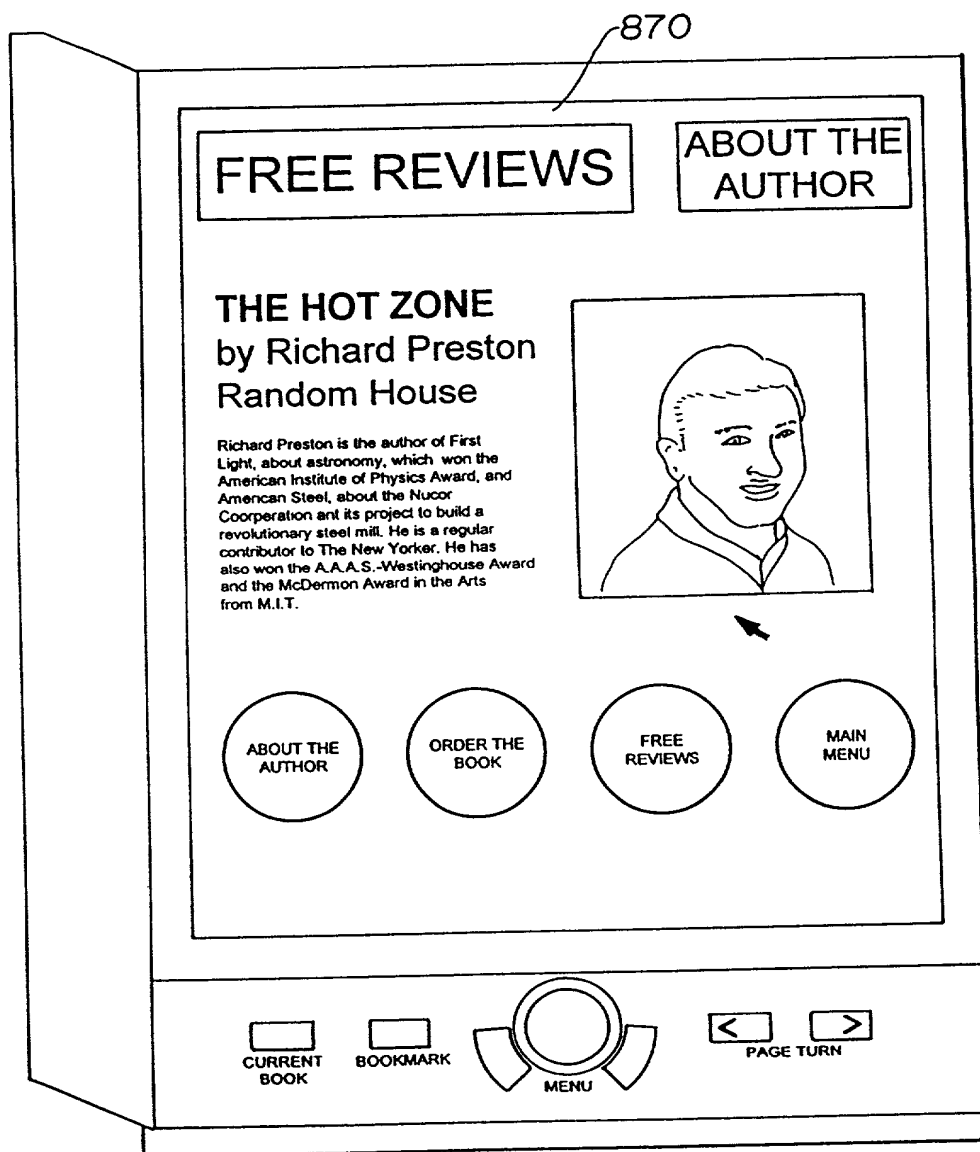 


Fig. 14q

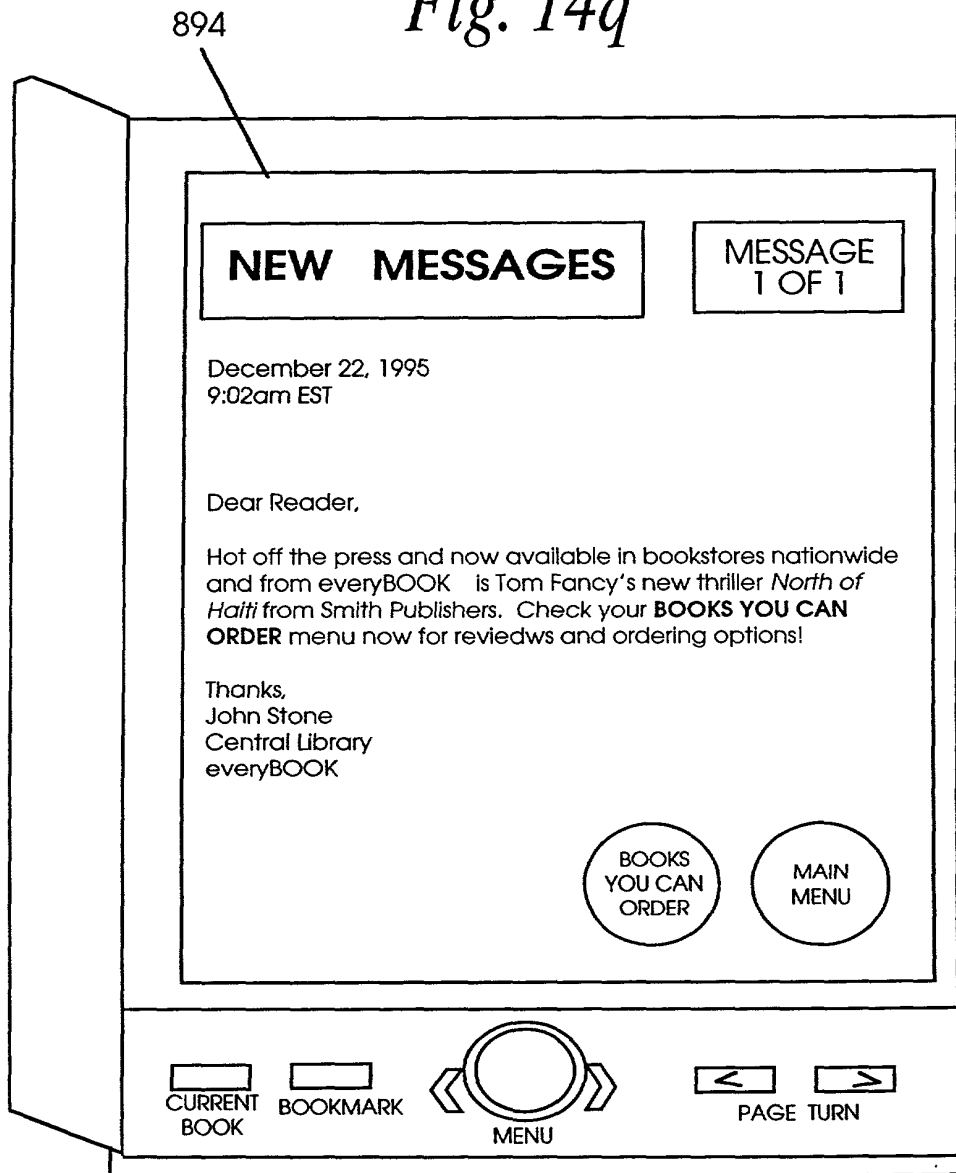 
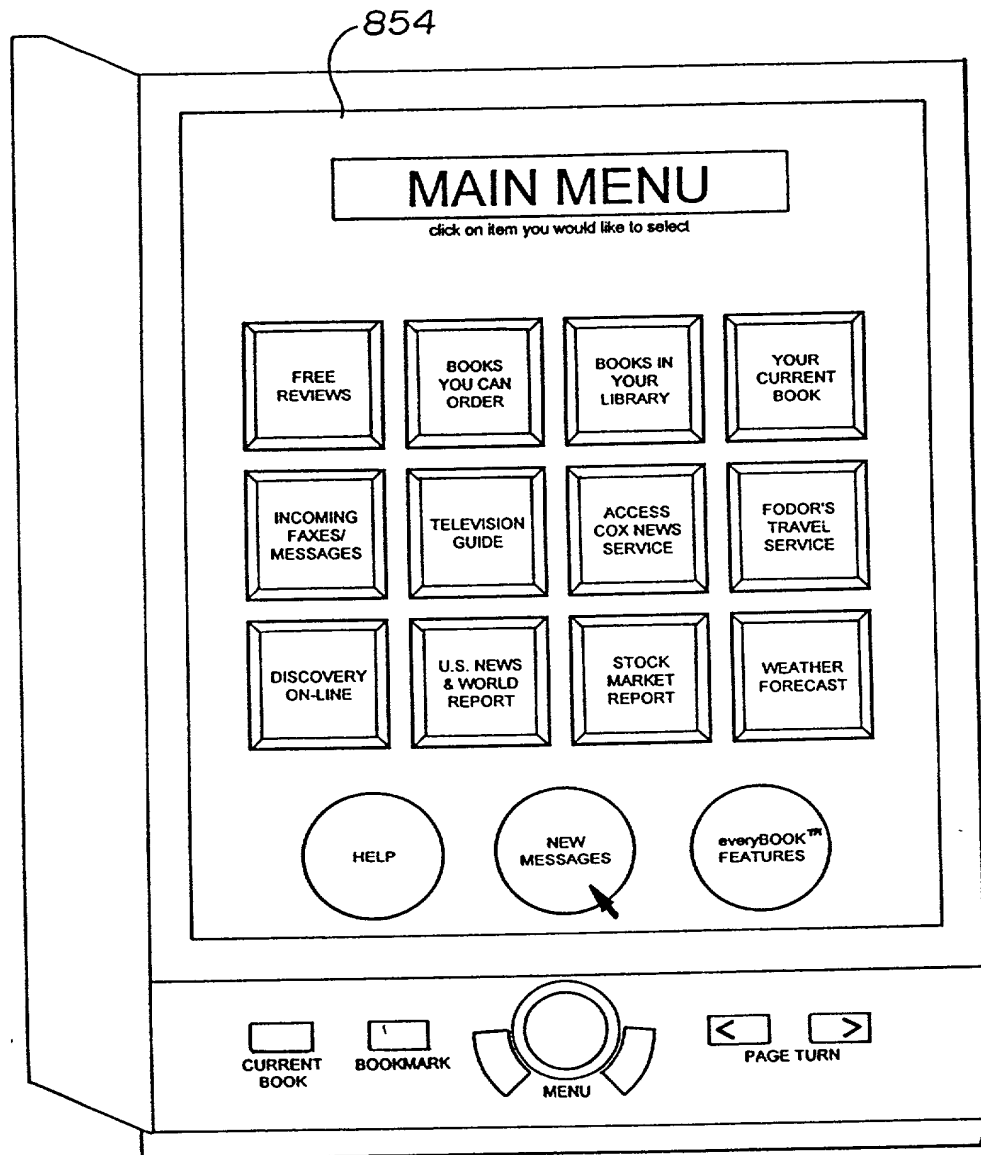 
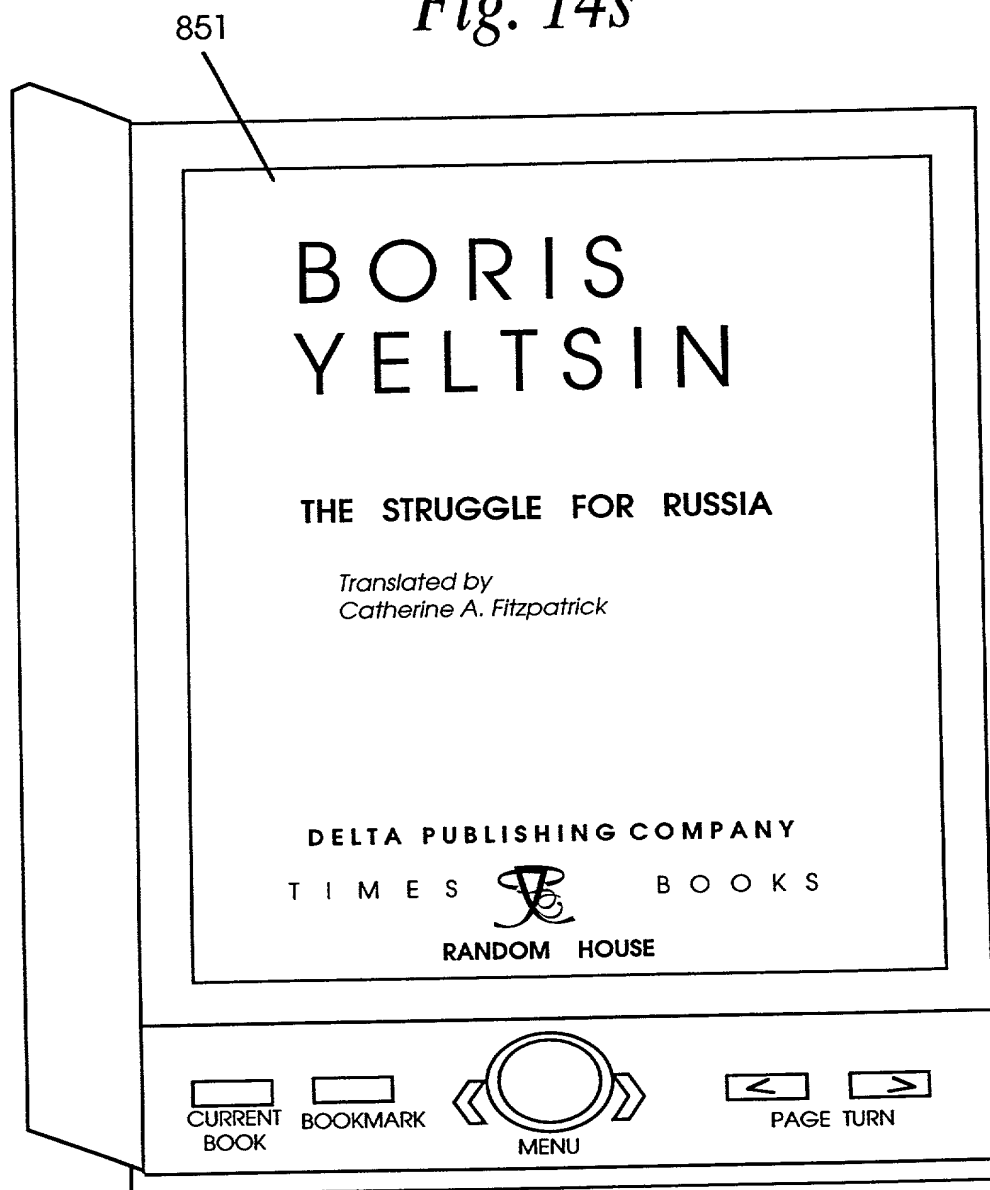 


Fig. 14r



09964887 092801
T08260" E08079660

Fig. 14s



853

Fig. 14t

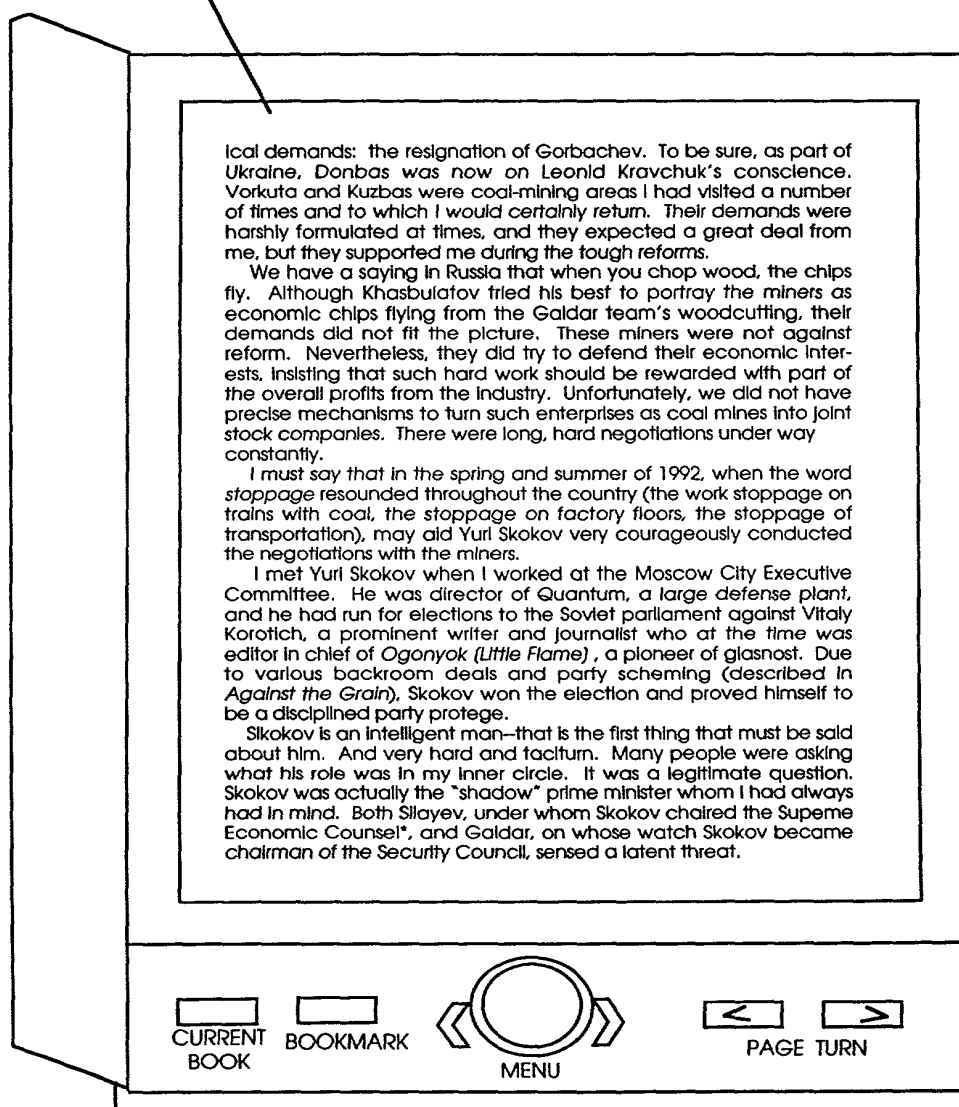 
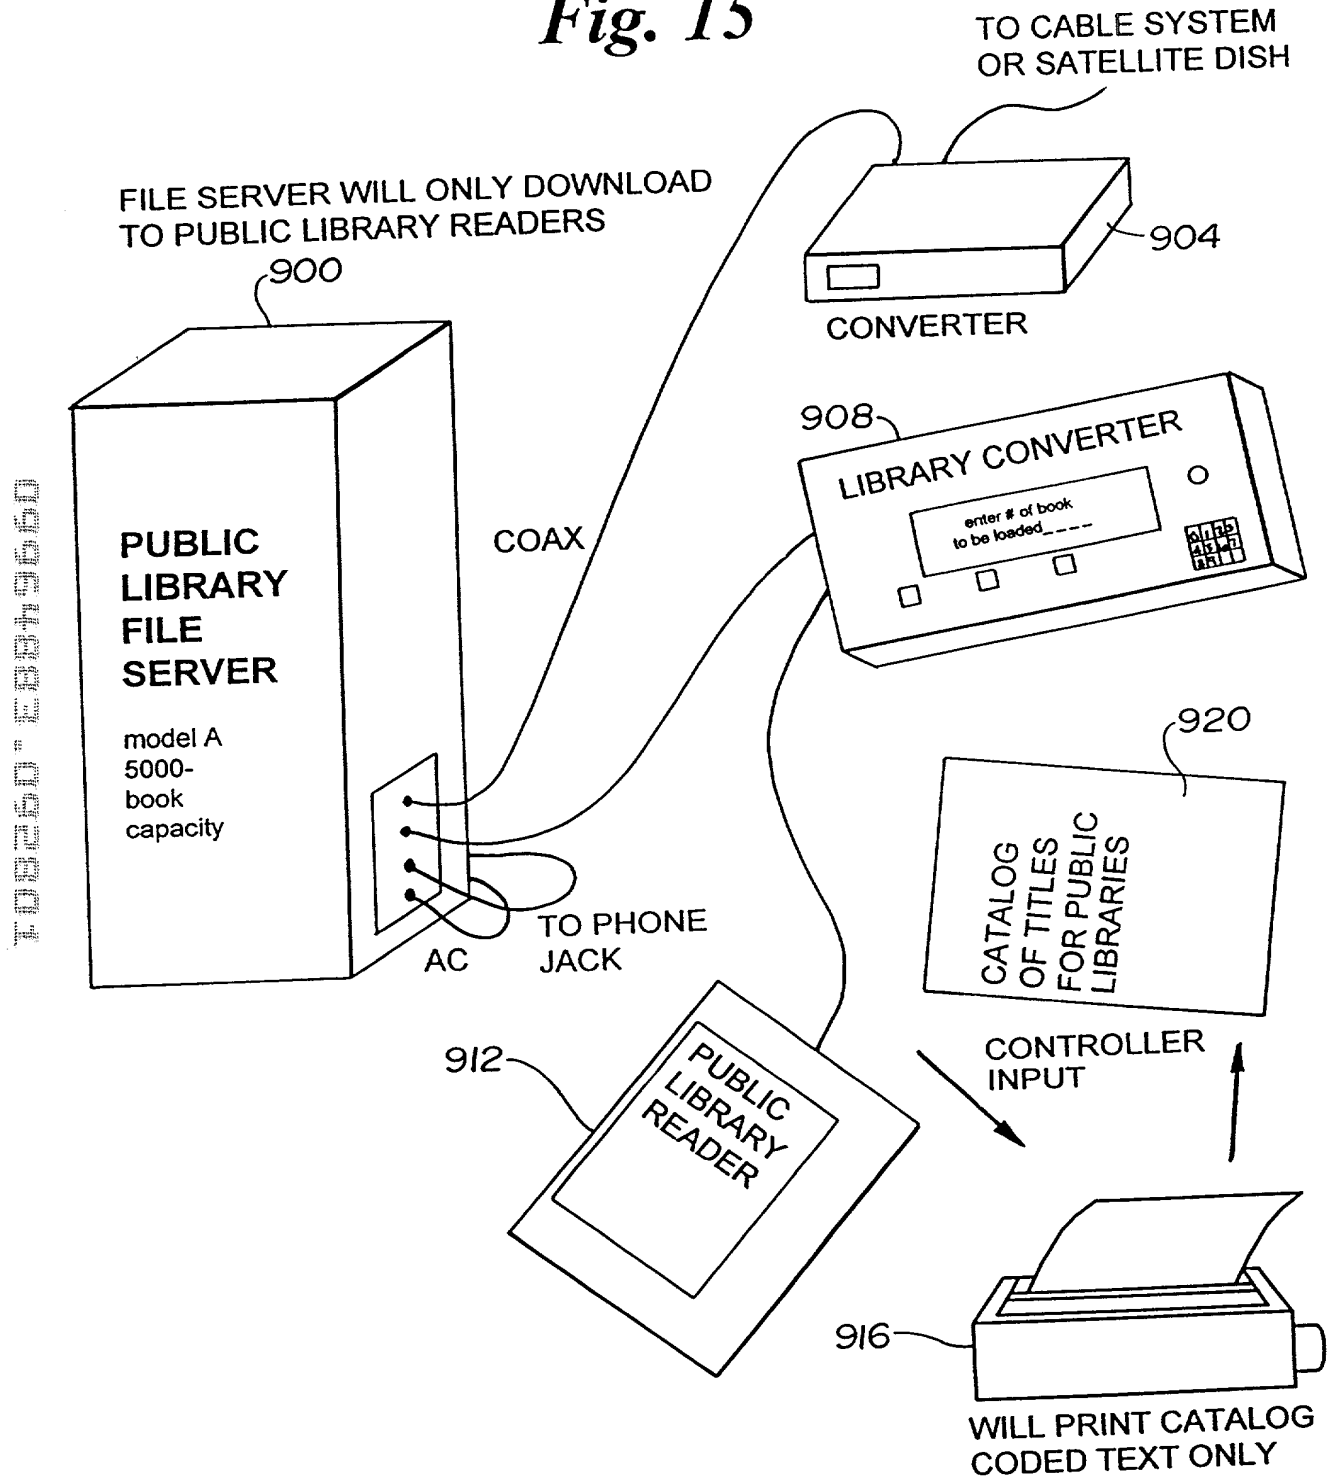 


Fig. 15



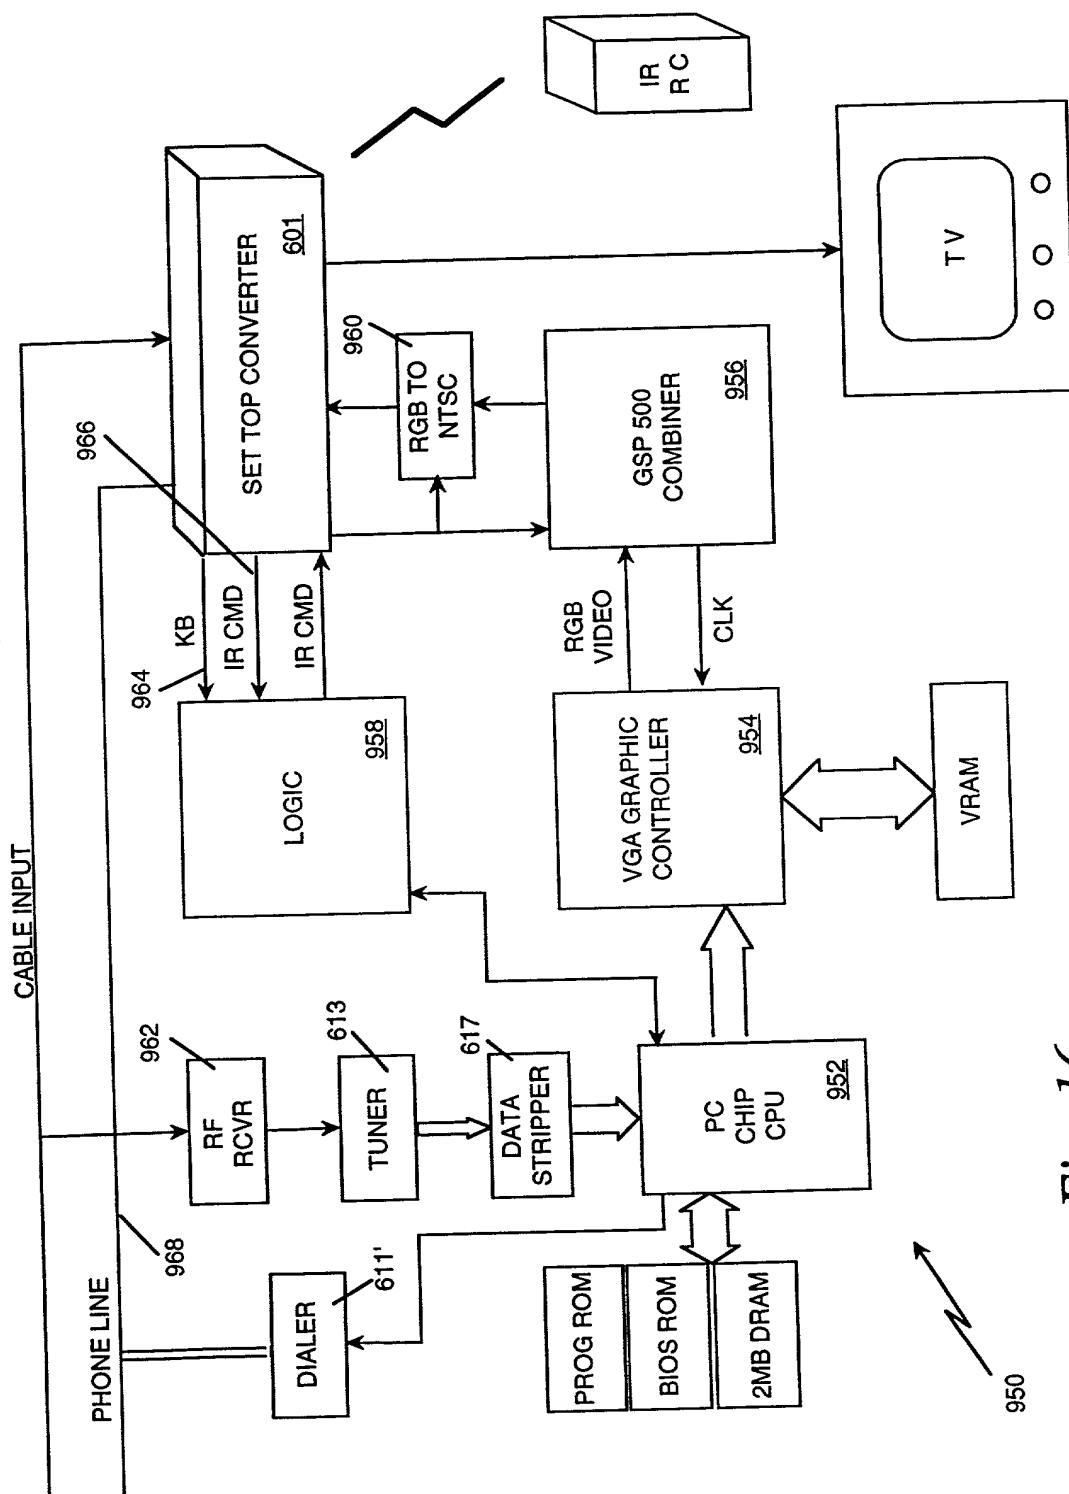 


Fig. 16a

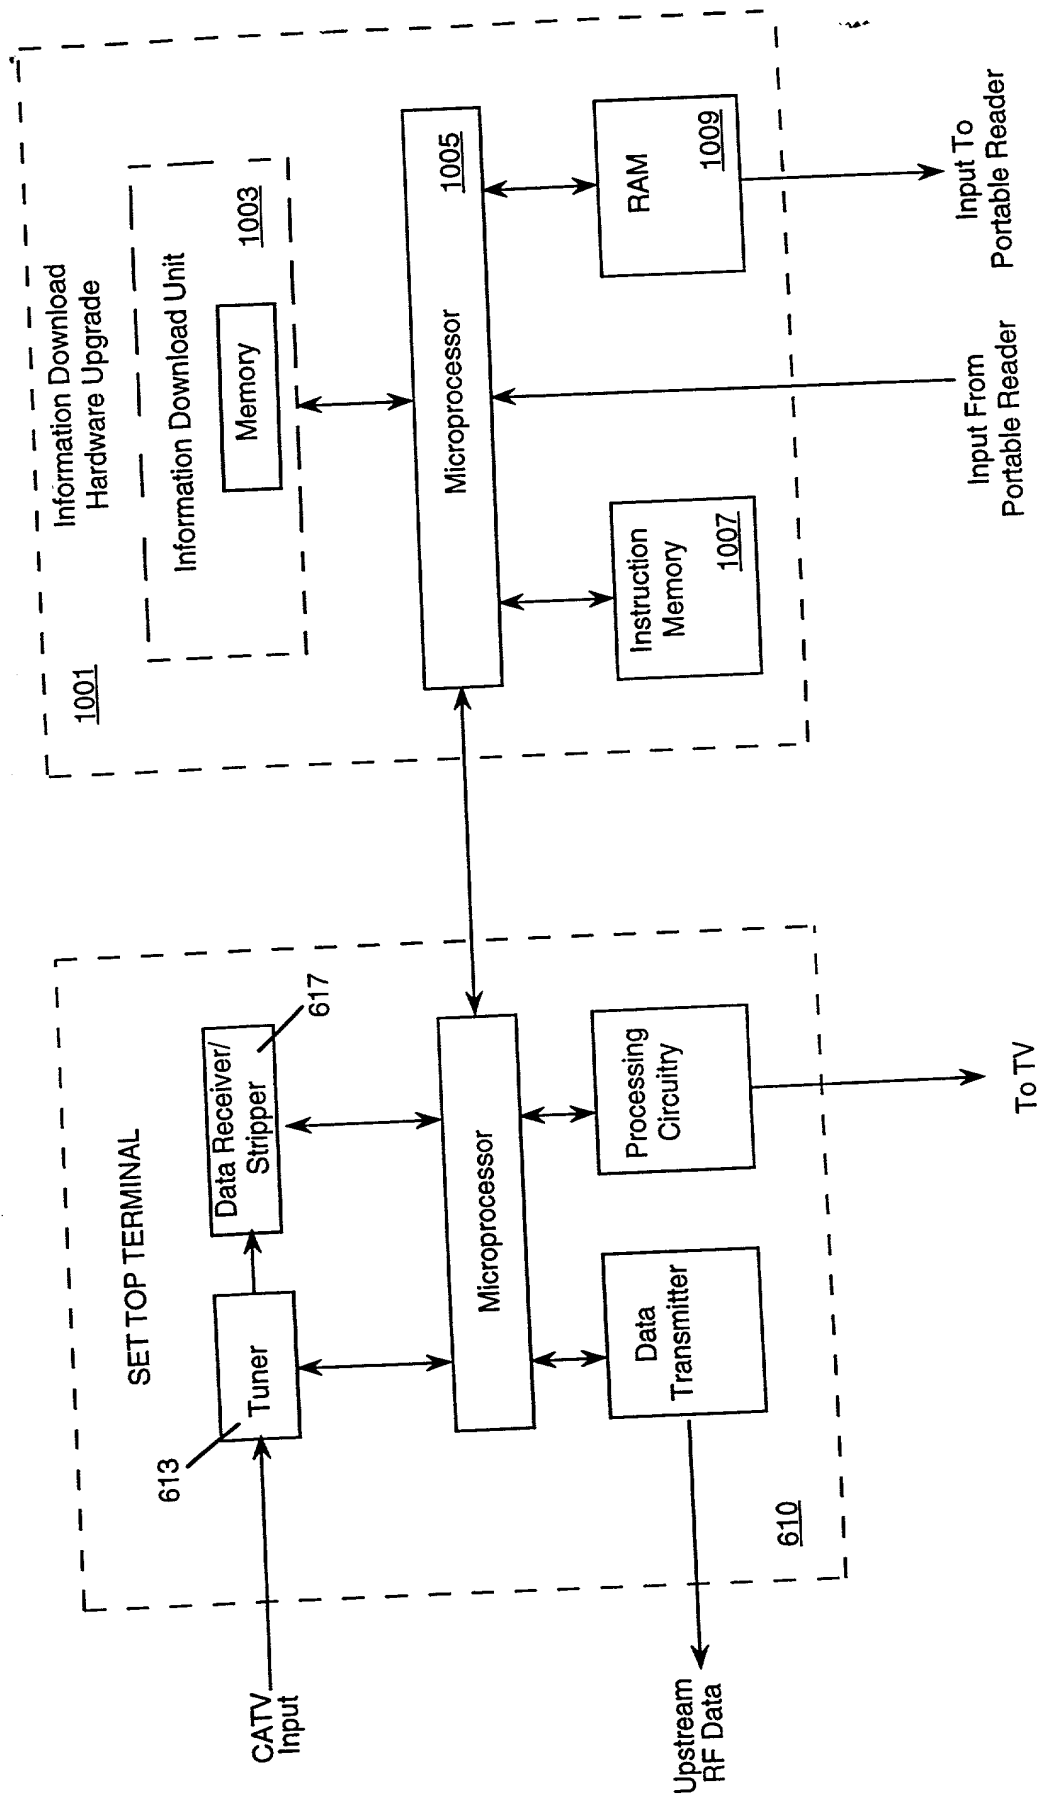 


Fig. 16b

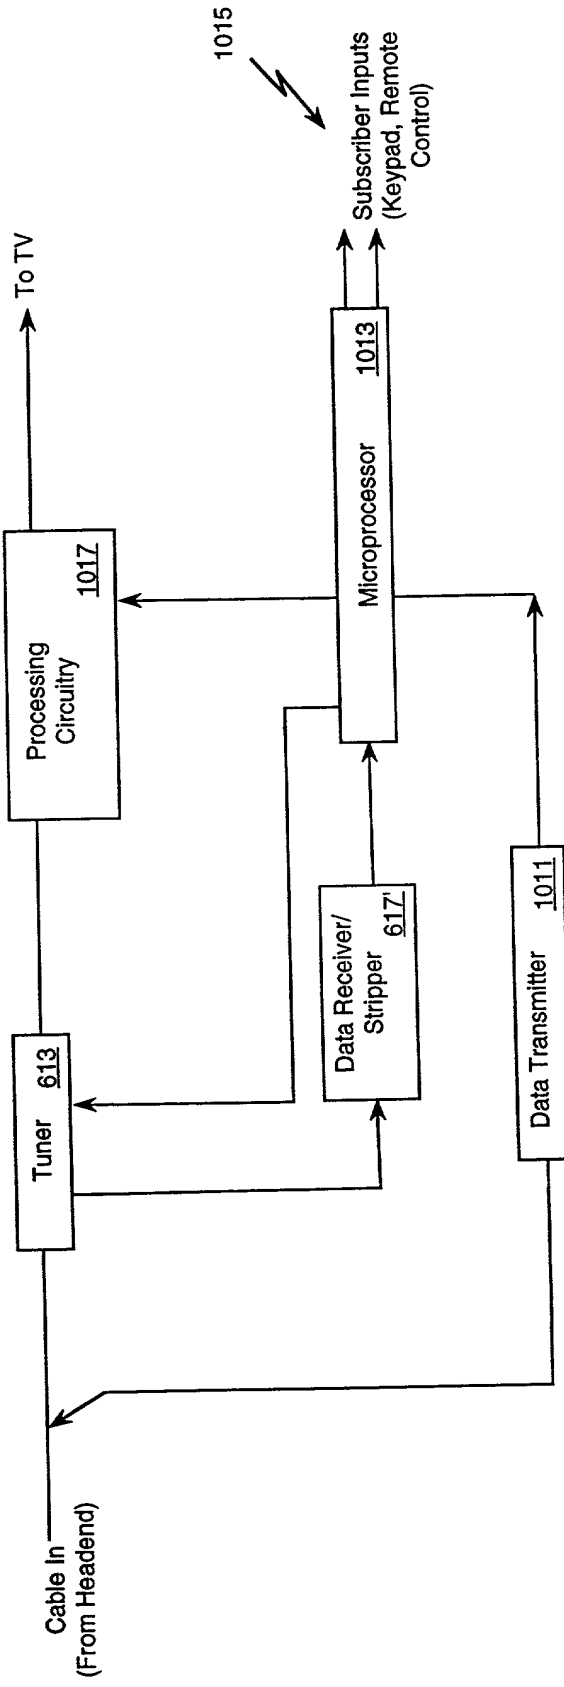 


Fig. 17

Fig. 18a

